

ECLIPSE

ELECTRICAL WIRING SUPPLEMENT

FOREWORD

This publication is a supplement to the Electrical Wiring Manual Pub. No. PHUE95E1 and contains only additions and changes to the original issue. It is recommended that all service mechanics engaged in the servicing of the vehicle refer to the following publications as well as this manual.

TECHNICAL INFORMATION MANUAL
WORKSHOP MANUAL

CHASSIS GROUP

PWUE95E1

BODY REPAIR MANUAL

PBUE95E1

ENGINE GROUP

PWEE□□□□

(Looseleaf edition)

PARTS CATALOGUE

All information, illustrations and product descriptions contained in this manual are current as of time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

GROUP INDEX

OUTLINE OF CHANGES

HOW TO READ THE WIRING
DIAGRAMS

WIRING HARNESS
CONFIGURATION DIAGRAMS

SINGLE PART INSTALLATION
POSITION

CIRCUIT DIAGRAMS

1

2

3

4



MITSUBISHI MOTOR SALES
Europe B.V.

HOW TO USE THIS MANUAL

CONTENTS

The preceding page contains GROUP INDEX that lists the group title and group number.

PAGE NUMBERS

All page numbers consist of two sets of digits separated by a dash. The digits preceding the dash identify the number of the group. The digits following the dash represent the consecutive page number within the group. The page number can be found on the top left or right of each page.

OPERATION AND TROUBLESHOOTING HINTS

In the GROUP 4 circuit diagrams, the operation and troubleshooting hints are given on the previous page or following page for each circuit where necessary.

OUTLINE OF CHANGES

CONTENTS

WIRING HARNESS CONFIGURATION DIAGRAMS	2	CIRCUIT DIAGRAM	3
SINGLE PART INSTALLATION POSITION ...	2	TABLE OF CIRCUIT DIAGRAMS	4

WIRING HARNESS CONFIGURATION DIAGRAMS

Wiring harness configuration diagrams			Description of changes
Connector symbol	Name	Reference page	
A	ENGINE COMPARTMENT	2-2	- The hydraulic unit connectors (A-23, A-24) have been changed to an ABS-ECU connector (A-24) to correspond to changes in the hydraulic unit. - The ignition timing adjustment connector (A-60) has been abolished. - The DRL relay connector (1) (A-116) has been abolished.
B	DASH PANEL	2-6	- The 2-pin stop lamp switch connector (B-05) has been abolished, leaving only the 4-pin stop lamp switch connector (B-06). - A diagnosis connector (B-37) has been added. - The ABS-ECU connector (B-58) has been abolished.
C	INTERIOR	2-10	- The number of pins in the rear wiring harness and fuel wiring harness combination connector (E-09) has been changed from 8 pins to 12 pins. - A fuel wiring harness and ABS wiring harness combination connector (E-49) has been added.

SINGLE PART INSTALLATION POSITION

Location of changes	Reference page	Description of changes
RELAY	3-2	The mounting position for the DRL relay has been changed to correspond to the abolition of the DRL relay connector (1).
ECU	3-2	The ABS-ECU mounting position has been changed to correspond to changes in the hydraulic unit.
SOLENOID VALVE	3-2	The hydraulic unit has been changed.
INSPECTION CONNECTOR	3-3	A diagnosis connector (B-37) has been added.

CIRCUIT DIAGRAM

Circuit diagrams			Description of changes
Main title	Subtitle	Reference page	
IGNITION SYSTEM	–	4-2	The ignition timing adjustment connector (A-60) has been abolished.
MPI SYSTEM	–	4-4	- The ignition timing adjustment connector (A-60) has been abolished. - A diagnosis connector (B-37) has been added.
HEADLAMP	Vehicles without daytime running lamp	4-12	The circuit has been changed to correspond to changes in the headlamp assembly.
	Vehicles with daytime running lamp	4-14	The circuit has been changed to correspond to changes in the headlamp assembly and the abolition of the DRL relay connector (1) (A-116).
STOP LAMP	–	4-18	The circuit has been changed to correspond to the abolition of the 2-pin stop lamp switch connector (B-05).
METER AND GAUGES	–	4-20	The number of pins in the rear wiring harness and fuel wiring harness combination connector has been changed from 8 pins to 12 pins.
FUEL WARNING LAMP	–	4-23	
ANTI-SKID BRAKING SYSTEM (ABS)	–	4-24	The circuit has been changed to correspond to changes in the hydraulic unit.
SUPPLEMENTAL RESTRAINT SYSTEM (SRS)	–	4-30	- The colour of the wire connecting the SRS-ECU and multi-purpose fuse No. (8) has been changed. - The colour of the wire connecting the SRS-ECU and the combination meter has been changed. - The colour of the wire connecting the SRS-ECU and the clock spring has been changed. - The colour of the wire connecting the SRS-ECU and the diagnosis connector has been changed.

TABLE OF CIRCUIT DIAGRAMS

This table of circuit diagrams indicates those circuits in which changes and/or additions, etc. have been made; the circuits are here listed in the sequence in which they are presented in the wiring diagrams. Please use this table for reference when following maintenance or repair procedures.

NOTE

- (1) A (Added) : This circuit has been newly added in this manual.
- (2) R (Revised) : This circuit has been changed, and is included in this manual.
- (3) D (Deleted) : This circuit has been deleted in this manual.
- (4) I (Included) : This circuit is included in this manual.
- (5) N (Not Included) : This circuit is not included in this manual.
- (6) P (Previous manual) : This circuit is not included in this manual, because it has not been changed. Refer to this previous manuals.

Main circuit	Circuit classifications	Pub No. PHUE95E1 (BASIC)	Pub No. PHUE95E1-A	Pub No. PHUE95E1-B
JUNCTION BLOCK (J/B)	—	I	P	P
JOINT CONNECTOR (J/C)	—	I	P	P
CENTRALIZED JUNCTION	—	I	P	P
POWER DISTRIBUTION SYSTEM	—	I	P	P
STARTING SYSTEM	—	I	P	P
IGNITION SYSTEM	—	I	R	R
CHARGING SYSTEM	—	I	R	P
MPI SYSTEM	—	I	R	R
COOLING SYSTEM	—	I	R	P
HEADLAMP	Vehicles without daytime running lamp	I	R	R
	Vehicles with daytime running lamp	I	R	R
HEADLAMP LEVELING SYSTEM	—	I	P	P
TAIL LAMP, POSITION LAMP AND LICENCE PLATE LAMP	—	I	R	P
FRONT FOG LAMP	—	I	P	P
REAR FOG LAMP	—	I	R	P
GLOVE BOX LAMP	—	I	P	P
ROOM LAMP, FOOT LAMP AND LUGGAGE COMPARTMENT LAMP	—	I	P	P
IGNITION KEY CYLINDER ILLUMINATION LAMP	—	I	P	P
TURN-SIGNAL LAMP AND HAZARD LAMP	—	I	R	P
STOP LAMP	—	I	P	R
BACK-UP LAMP	—	I	P	P
HORN	—	I	P	P
METER AND GAUGES	—	I	P	R
BRAKE WARNING LAMP	—	I	P	P
OIL PRESSURE WARNING LAMP	—	I	P	P

Main circuit	Circuit classifications	Pub No. PHUE95E1 (BASIC)	Pub No. PHUE95E1-A	Pub No. PHUE95E1-B
FUEL WARNING LAMP	—	I	P	R
ENGINE OIL LEVEL WARNING LAMP	—	I	P	P
CENTRAL DOOR LOCKING SYSTEM	—	I	P	P
POWER WINDOWS	—	I	P	P
HEATER	—	I	P	P
AIR CONDITIONER	—	I	R	P
WINDSHIELD WIPER AND WASHER	—	I	R	P
REAR WIPER AND WASHER	—	I	P	P
REAR WINDOW DEFOGGER	—	I	P	P
HEADLAMP WASHER	—	I	R	P
REMOTE CONTROLLED MIRROR	—	I	P	P
RESERVE TERMINAL FOR RADIO	—	N	A	P
RADIO WITH TAPE PLAYER	—	I	P	P
CLOCK	—	N	A	P
CIGARETTE LIGHTER	—	I	P	P
ANTI-SKID BRAKING SYSTEM	—	I	P	R
AUTO-CRUISE CONTROL SYSTEM	—	I	P	P
SUPPLEMENTAL RESTRAINT SYSTEM (SRS)	—	I	P	R
IMMOBILIZER SYSTEM	—	I	R	P
POWER SEAT	—	I	P	P
LIGHTING MONITOR BUZZER	—	I	P	P
SUNROOF	—	I	P	P

NOTES

HOW TO READ THE WIRING DIAGRAMS

CONTENTS

MODEL	1-2
-------------	-----

MODEL



Model code		Engine model	Transmission model	Fuel supply system
D32A	MNHSLF6	4G63-DOHC (1,997 ml)	F5M31 (2WD-5M/T)	MPI

WIRING HARNESS CONFIGURATION DIAGRAMS

CONTENTS


ENGINE COMPARTMENT	2-2	INTERIOR	2-10
DASH PANEL	2-6		

ENGINE COMPARTMENT

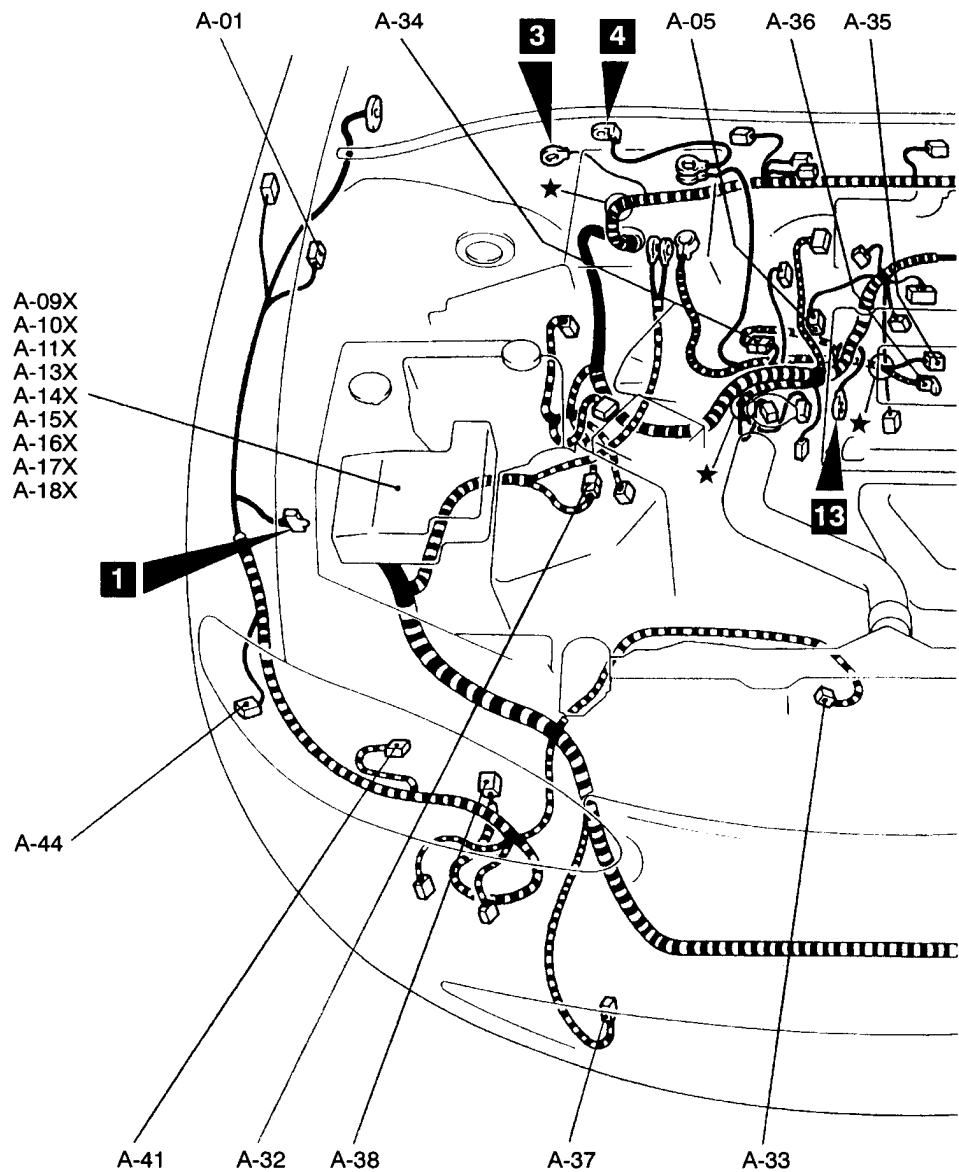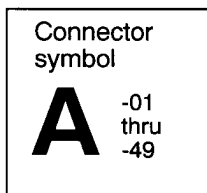

A-01 (2-B) ABS wheel-speed sensor (front: RH)
 A-02 (1) Alternator
 A-03 (4-GR) Alternator
 A-04 (3-B) Crankshaft position sensor
 A-05 (2-GR) Detonation sensor
 A-08 (2-B) ABS wheel-speed sensor (front: LH)
 A-09X (5) Condenser fan relay (LO)
 A-10X (5) Condenser fan relay (HI)
 A-11X (5) Radiator fan relay (LO)
 A-13X (5) Radiator fan relay (HI)



A-14X (5) Headlamp relay
 A-15X (5) Tail lamp relay
 A-16X (5) Front fog lamp relay
 A-17X (5) Horn relay
 A-18X (5) A/C compressor clutch relay
 A-20 (2-B) Front combination lamp (LH)
 A-24 (31-B) ABS-ECU
 A-25 (8-B) Headlamp assembly (LH)
 A-26 (1-B) Front wiring harness and joint wiring harness combination

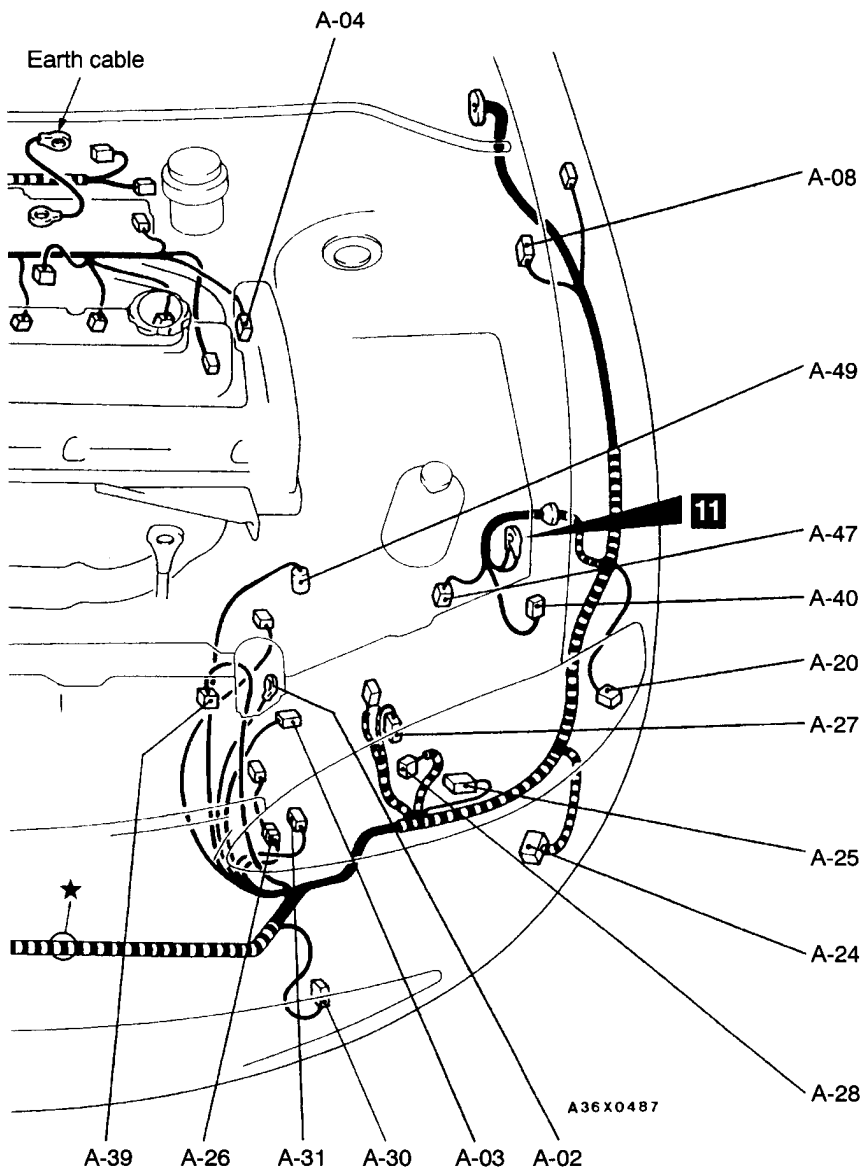


A-27 (12-B)	DRL-ECU
A-28 (2-GR)	Horn (LH)
A-30 (2-B)	Front fog lamp (LH)
A-31 (1)	Oil pressure switch
A-32 (12-B)	Front wiring harness and control wiring harness combination
A-33 (4-GR)	Radiator fan motor
A-34 (2-B)	Control wiring harness and battery cable combination
A-35 (1-B)	Starter motor
A-36 (1)	Starter motor
A-37 (2-B)	Front fog lamp (RH)

A-38 (2-B)	Horn (RH)
A-39 (4-GR)	Condenser fan motor
A-40 (4-B)	Alternator relay
A-41 (8-B)	Headlamp assembly (RH)
A-44 (2-B)	Front combination lamp (RH)
A-47 (2-BR)	Dual pressure switch
A-49 (1)	Power steering oil pressure switch

Remark
Connector numbers enclosed by a frame are transferred connectors.

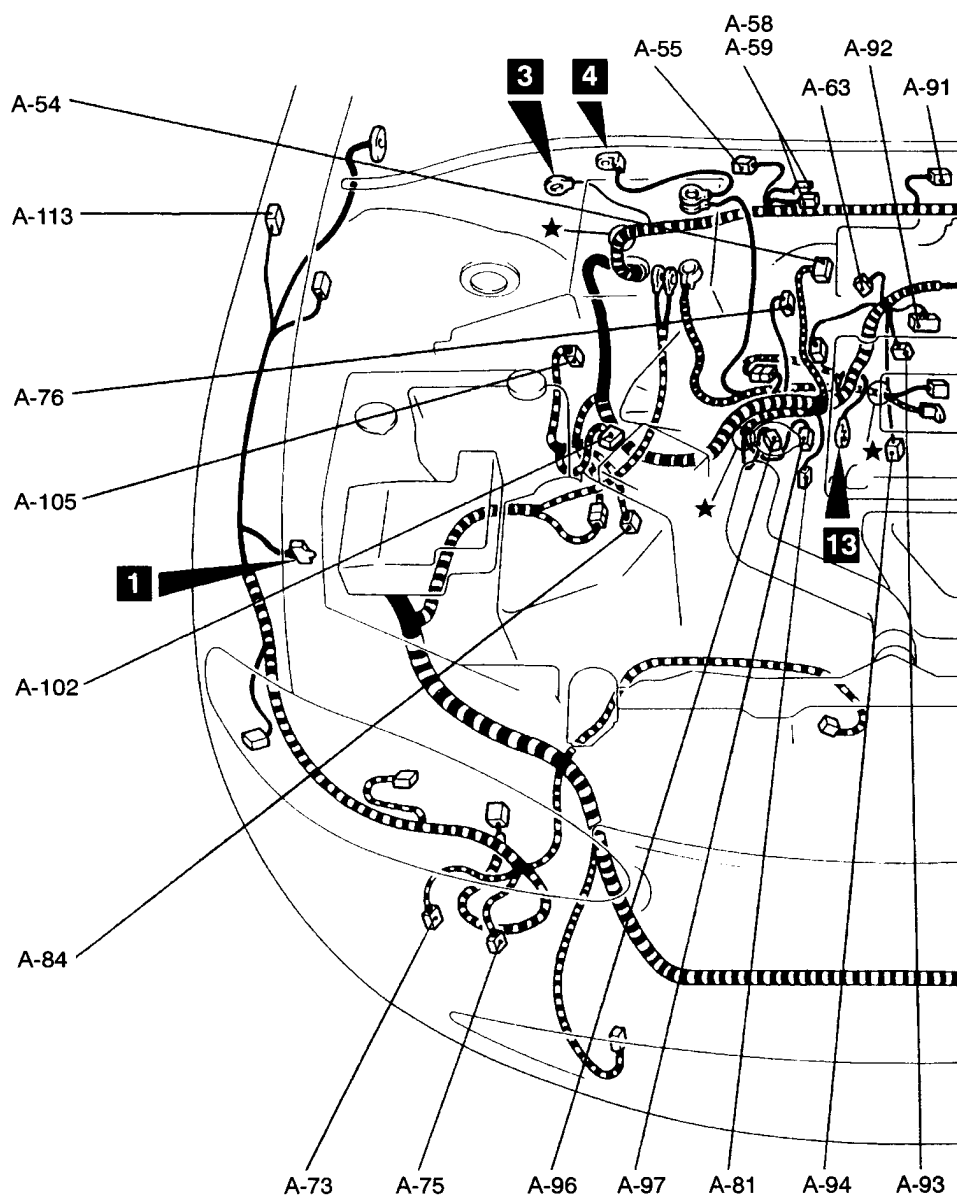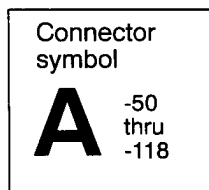



A-50 (2-B)	Injector No. 1	A-63 (4-GR)	Throttle position sensor
A-54 (6-B)	Idle air control motor	A-64 (1-B)	Capacitor
A-55 (6-B)	Windshield wiper motor	A-66 (2-B)	Purge solenoid valve
A-56 (2-B)	Injector No. 2	A-67 (2)	Brake fluid level sensor
A-58 (1-B)	Fuel pump check connector	A-73 (4)	Windshield washer fluid level switch or headlamp washer motor
A-59 (1-L)	Engine speed detection connector	A-75 (2)	Windshield washer motor
A-61 (2-B)	Injector No. 3	A-76 (3-B)	Vehicle speed sensor
A-62 (3-B)	Ignition coil		

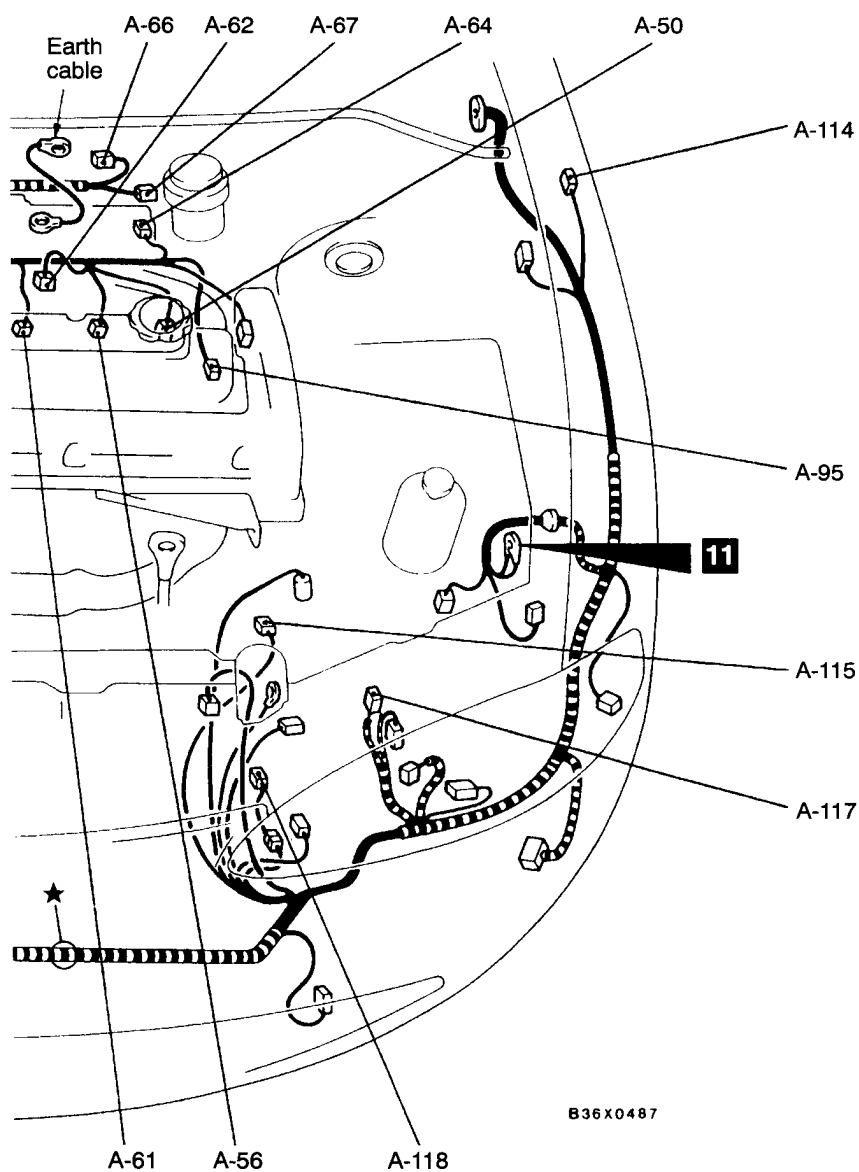

A-81 (3-GR) Camshaft position sensor
 A-84 (2-B) Back-up lamp switch
 A-91 (2-B) EGR solenoid valve
 A-92 (8-B) Power transistor
 A-93 (2-B) Injector No. 4
 A-94 (4-B) Oxygen sensor (front)
 A-95 (3-B) A/C compressor
 A-96 (1) Engine coolant temperature gauge unit


A-97 (2-B) Engine coolant temperature sensor
 A-102 (8-B) Air flow sensor
 A-105 (4-B) Auto-cruise control vacuum pump
 A-113 (2-GR) Side turn-signal lamp (RH)
 A-114 (2-GR) Side turn-signal lamp (LH)
 A-115 (2) Engine oil level sensor
 A-117 (4) DRL relay
 A-118 (1-B) Oil pressure gauge unit

DASH PANEL

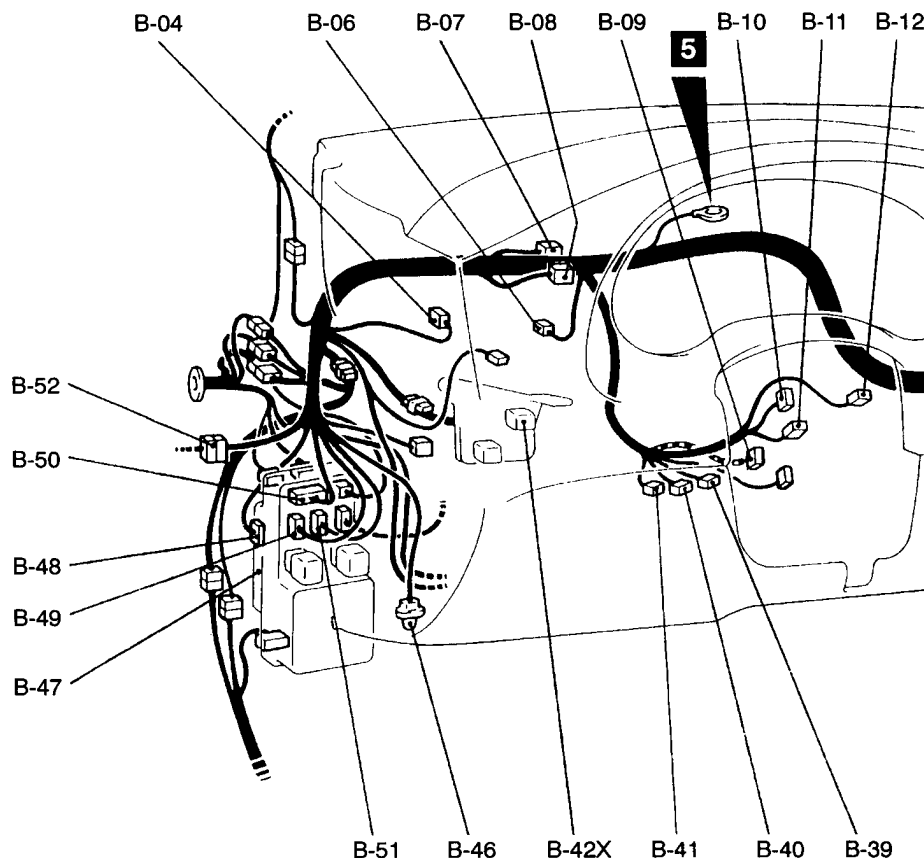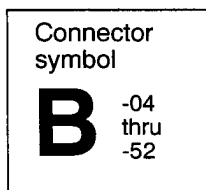

B-04 (2-B)	Clutch pedal position switch
<u>B-06</u> (4)	Stop lamp switch
B-07 (33)	J/C (1)
B-08 (33)	J/C (2)
B-09 (6)	Ignition switch
B-10 (6-GR)	Column switch
B-11 (10)	Column switch
B-12 (12)	Column switch
B-15 (2)	Blower control panel illumination lamp

B-16 (8)	Blower switch
B-17 (6)	A/C switch
B-18 (3-B)	Turn-signal and hazard flasher unit
B-22 (4)	Blower resistor
B-24 (2)	Blower motor
B-25 (3)	A/C-ECU
B-27 (20)	Body wiring harness and door wiring harness (RH) combination


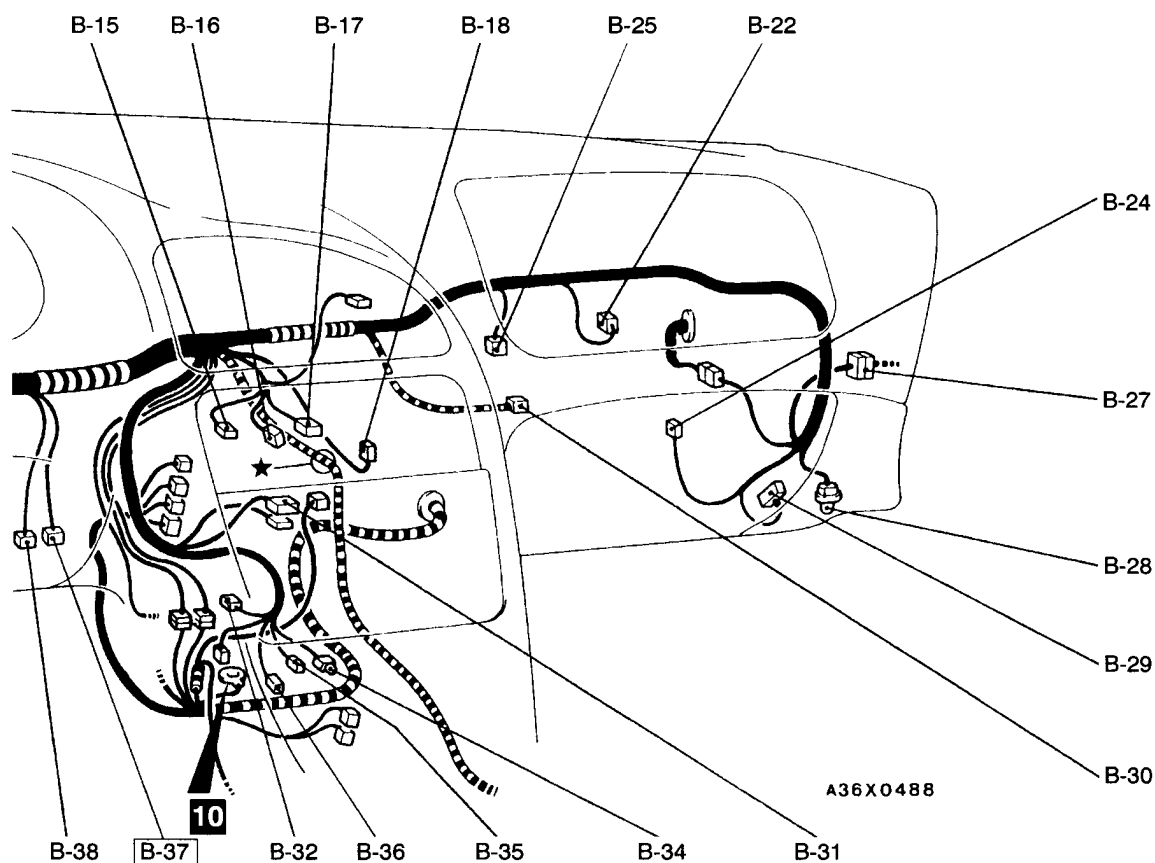


B-28 (2)	Foot lamp (RH)
B-29 (26-Y)	Auto-cruise-ECU
B-30 (2-R)	Air bag module (passenger's side)
B-31 (14)	Spare connector (radio)
B-32 (8)	Door lock power relay
B-34 (2)	Cigarette lighter illumination lamp
B-35 (1)	Cigarette lighter
B-36 (1-B)	Cigarette lighter
B-37 (12)	Diagnosis connector
B-38 (16-B)	Diagnosis connector
B-39 (7)	Key reminder switch
B-40 (3)	Clock spring
B-41 (2-R)	Air bag module (driver's side)

B-42X (5)	Power window relay
B-46 (2)	Foot lamp (LH)
B-47 (20)	ETACS-ECU
B-48 (16-B)	ETACS-ECU
B-49 (10-B)	Body wiring harness and J/B combination
B-50 (18-B)	Body wiring harness and J/B combination
B-51 (20-B)	Body wiring harness and J/B combination
B-52 (20)	Body wiring harness and door wiring harness (LH) combination


Remark

Connector numbers in are connector numbers which have been changed or added.

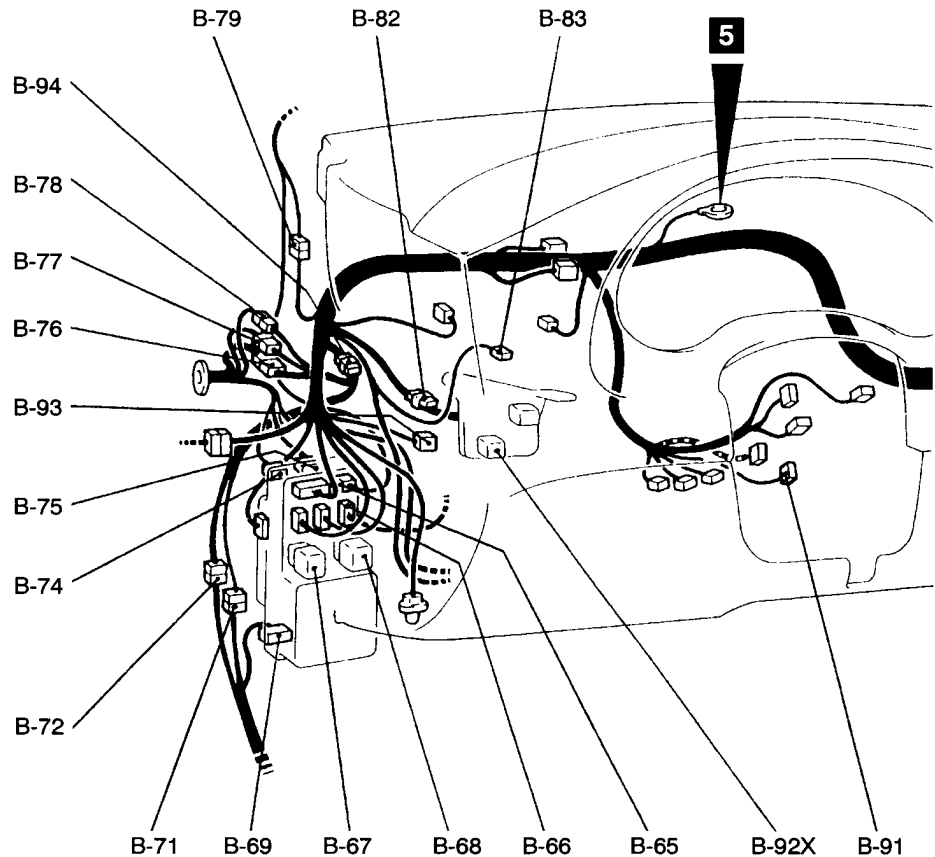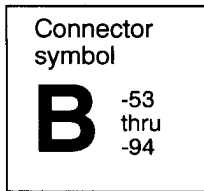



B-53 (26-Y)	Engine-ECU
B-54 (16-Y)	Engine-ECU
B-55 (12-Y)	Engine-ECU
B-56 (22-Y)	Engine-ECU
B-59 (14)	Body wiring harness and front wiring harness combination
B-63 (22-L)	Body wiring harness and control wiring harness combination
B-64 (10-L)	Body wiring harness and control wiring harness combination
B-65 (4-B)	Roof wiring harness and J/B combination

B-66 (22-B)	Instrument panel wiring harness and J/B combination
B-67 (5)	Defogger relay
B-68 (5)	Blower relay
B-69 (19-B)	Rear wiring harness and J/B combination
B-71 (22-L)	Body wiring harness and rear wiring harness combination
B-72 (6-L)	Body wiring harness and rear wiring harness combination
B-74 (1-B)	Front wiring harness and J/B combination

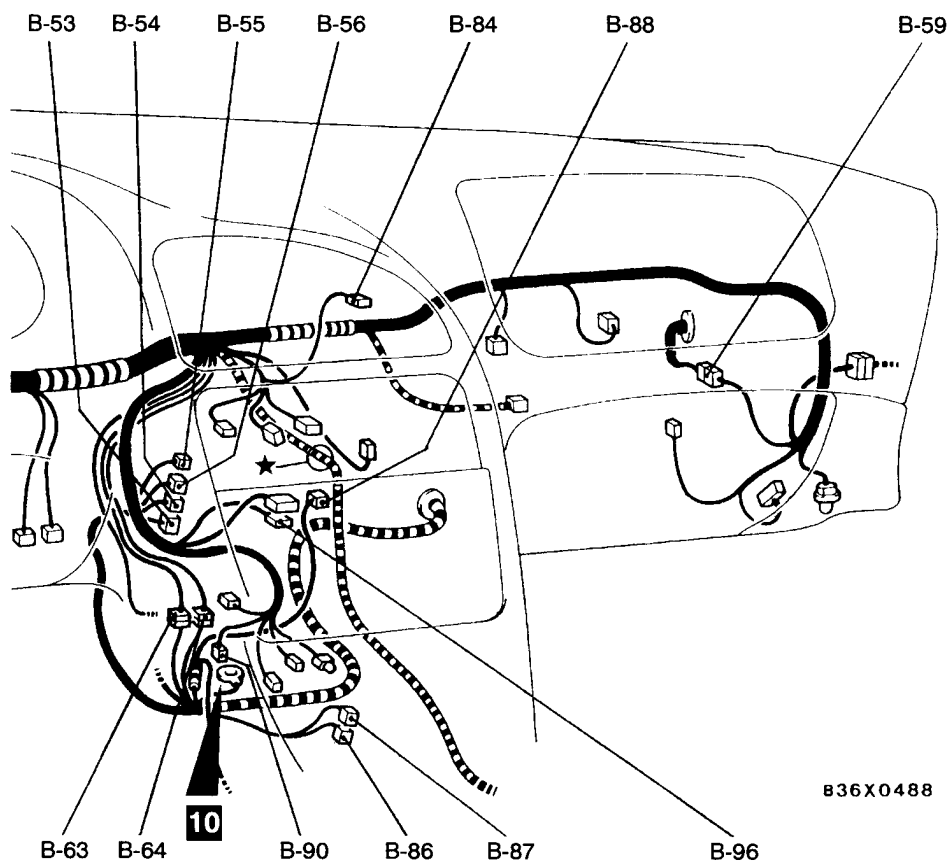


B-75 (18-B)	Front wiring harness and J/B combination	B-83 (11)	Remote controlled mirror switch
B-76 (20)	Body wiring harness and front wiring harness combination	B-84 (8)	Rear wiper and washer switch
B-77 (8)	Body wiring harness and front wiring harness combination	B-86 (4)	Fuel pump relay
B-78 (1)	Body wiring harness and front wiring harness combination	B-87 (4)	MPI relay
B-79 (4)	Body wiring harness and roof wiring harness combination	B-88 (6)	Engine oil level relay
B-82 (2)	Dedicated fuse (with auto-cruise control system)	B-90 (6-B)	Headlamp washer relay
B-82 (2)	Dedicated fuse (with auto-cruise control system)	B-91 (2)	Ignition key ring antenna
		B-92X (5)	Rear fog lamp relay
		B-93 (16-B)	Immobilizer-ECU
		B-94 (3)	Diode (for headlamp circuit)
		B-96 (4)	Clock

INTERIOR

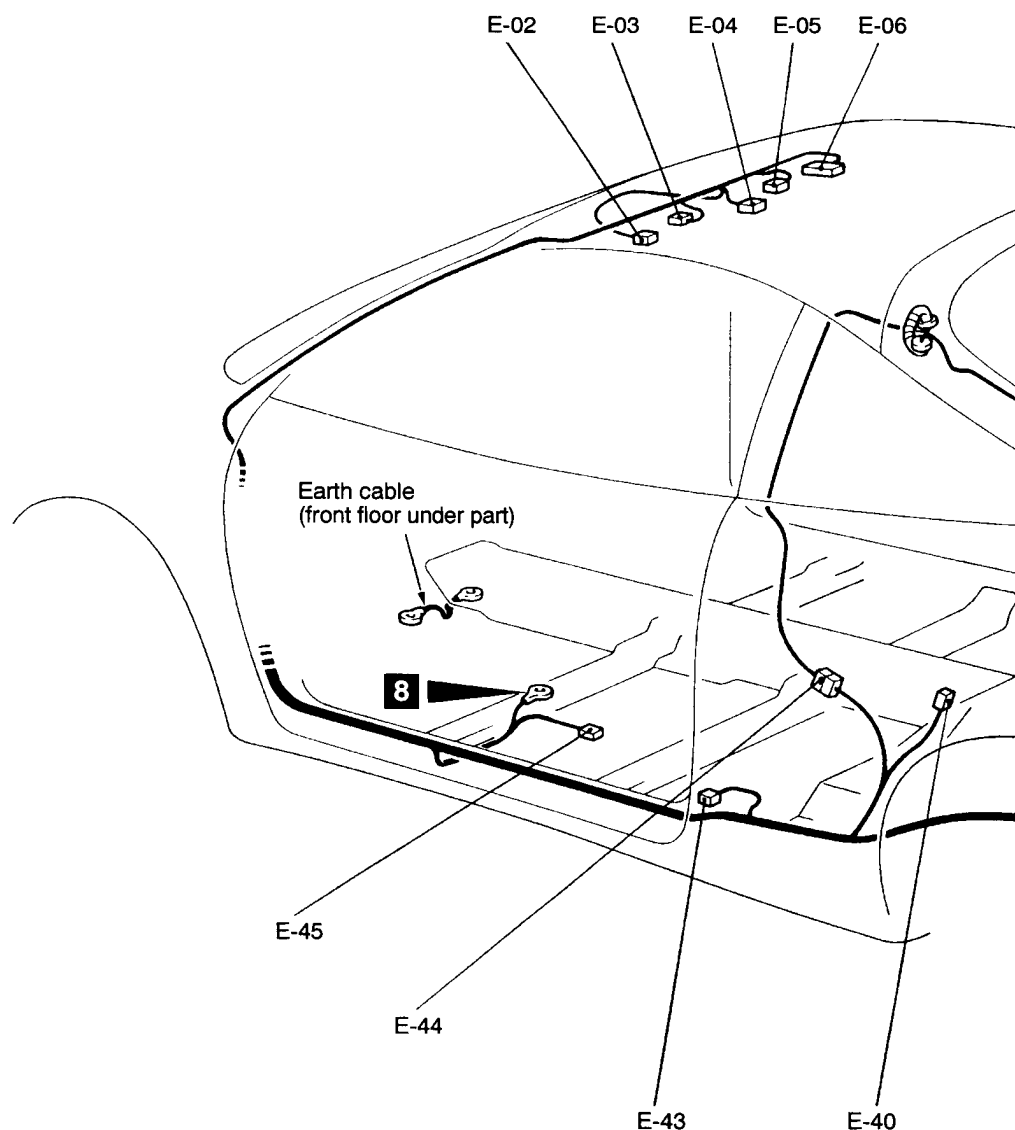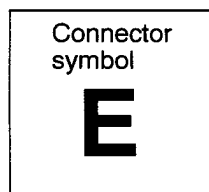

E-02 (4-B)	Room lamp <with sunroof>
E-03 (2)	Sunroof motor
E-04 (3)	Room lamp <without sunroof>
E-05 (3)	Sunroof switch
E-06 (10)	Sunroof-ECU
E-09 (12-B)	Rear wiring harness and fuel wiring harness combination
E-10 (1-B)	Defogger (+)
E-11 (2)	Door switch (RH)
E-12 (4-B)	Fuel wiring harness and ABS wheel-speed sensor wiring harness combination

E-13 (2-B)	Rear speaker (RH)
E-14 (1-B)	Defogger (-)
E-15 (3-B)	Rear wiper motor
E-16 (2)	High-mounted stop lamp
E-17 (3-B)	Rear combination lamp (RH)
E-18 (7)	Rear combination lamp (RH)
E-19 (1-B)	Luggage compartment lamp switch
E-22 (2)	Back-up lamp (RH)
E-23 (2-GR)	Licence plate lamp (RH)
E-24 (2-GR)	Licence plate lamp (LH)
E-25 (3-B)	Rear wiring harness and licence plate lamp wiring harness combination

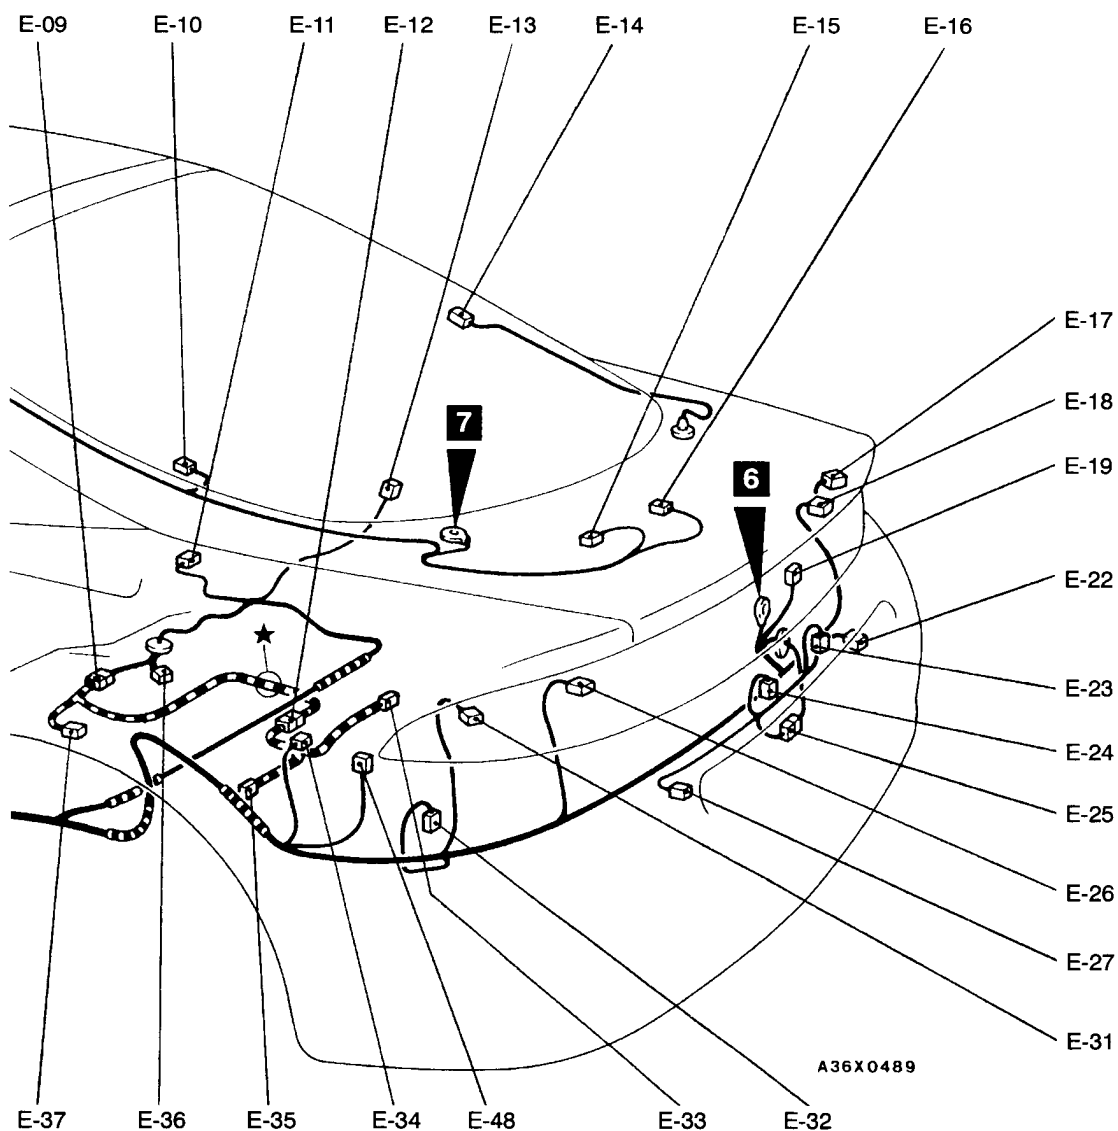

E-26 (7)	Rear combination lamp (LH)
E-27 (2)	Back-up lamp (LH)
E-31 (3-B)	Rear combination lamp (LH)
E-32 (2)	Rear washer motor
E-33 (2-GR)	ABS wheel-speed sensor (rear: RH)
E-34 (2)	Luggage compartment lamp
E-35 (2-B)	ABS wheel-speed sensor (rear: LH)
E-36 (2)	Fuel pump
E-37 (3)	Fuel gauge unit
E-40 (2-B)	Rear speaker (LH)

E-43 (2)	Door switch (LH)
E-44 (6)	Rear wiring harness and tailgate wiring harness combination
E-45 (2)	Power seat assembly
E-48 (6)	Motor antenna assembly

Remark

Connector numbers enclosed by a frame are newly added connectors or connectors the number of pins in which has been changed.

NOTES


SINGLE PART INSTALLATION POSITION

CONTENTS


RELAY	3-2	SOLENOID VALVE	3-2
ECU	3-2	INSPECTION CONNECTOR	3-3

3-2 SINGLE PART INSTALLATION POSITION – Relay/ECU/Solenoid Valve

RELAY

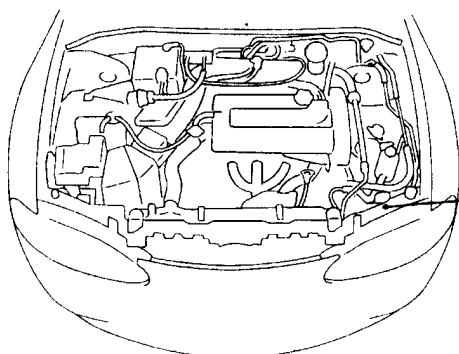


16X1296

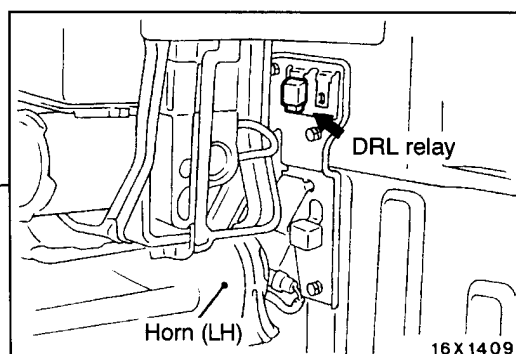


16X1409
00007091

ECU

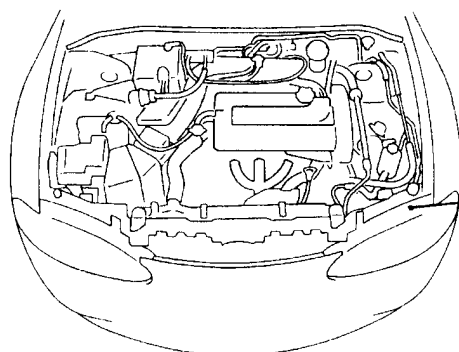


16X1296

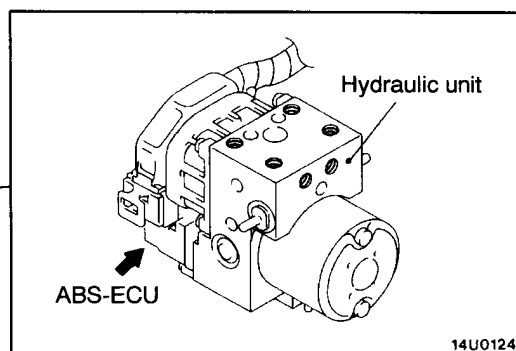


14U0124
00007092

SOLENOID VALVE

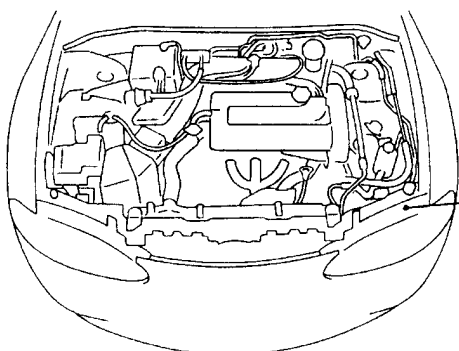


16X1296

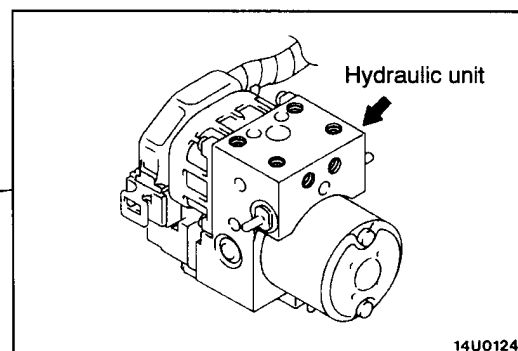


14U0124
00007093

INSPECTION CONNECTOR

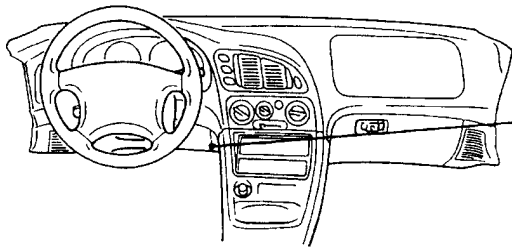

16X1295

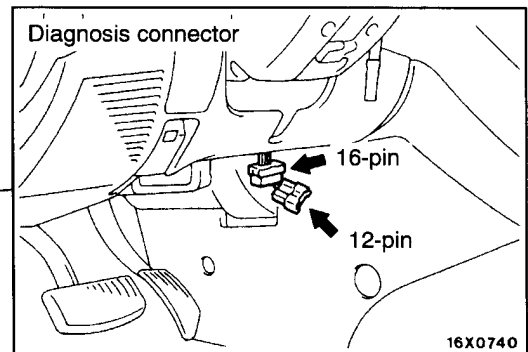





00007094

CIRCUIT DIAGRAM

CONTENTS

IGNITION SYSTEM	4-2	METER AND GUAGES	4-20
MPI SYSTEM	4-4	FUEL WARNING LAMP	4-23
HEADLAMP		ANTI-SKID BRAKING SYSTEM (ABS)	4-24
Vehicles without daytime running lamp	4-12	SUPPLEMENTAL RESTRAINT	
Vehicles with daytime running lamp	4-14	SYSTEM (SRS)	4-30
STOP LAMP	4-18		

   IGNITION SYSTEM

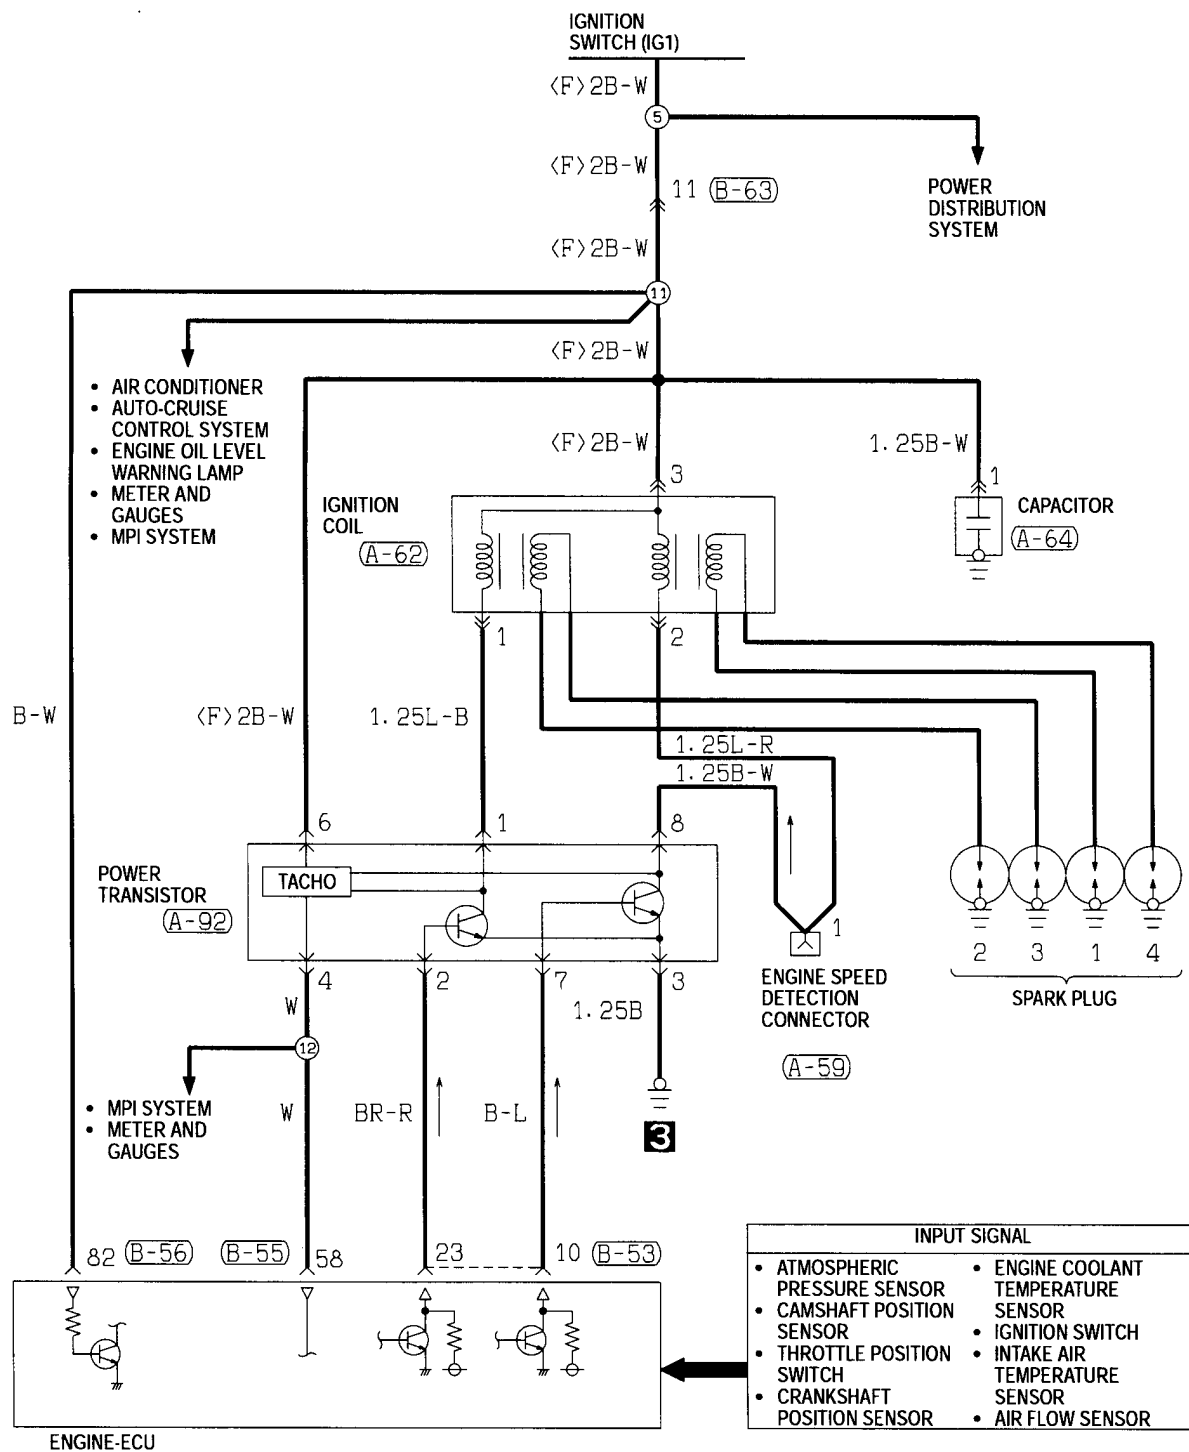

Wire color code
 B : Black
 BR : Brown
 W : White
 V : Violet


LG : Light Green
 O : Orange
 SB : Sky Blue

G : Green
 GR : Gray
 P : Pink


L : Blue
 R : Red
 Y : Yellow

NOTES

MPI SYSTEM

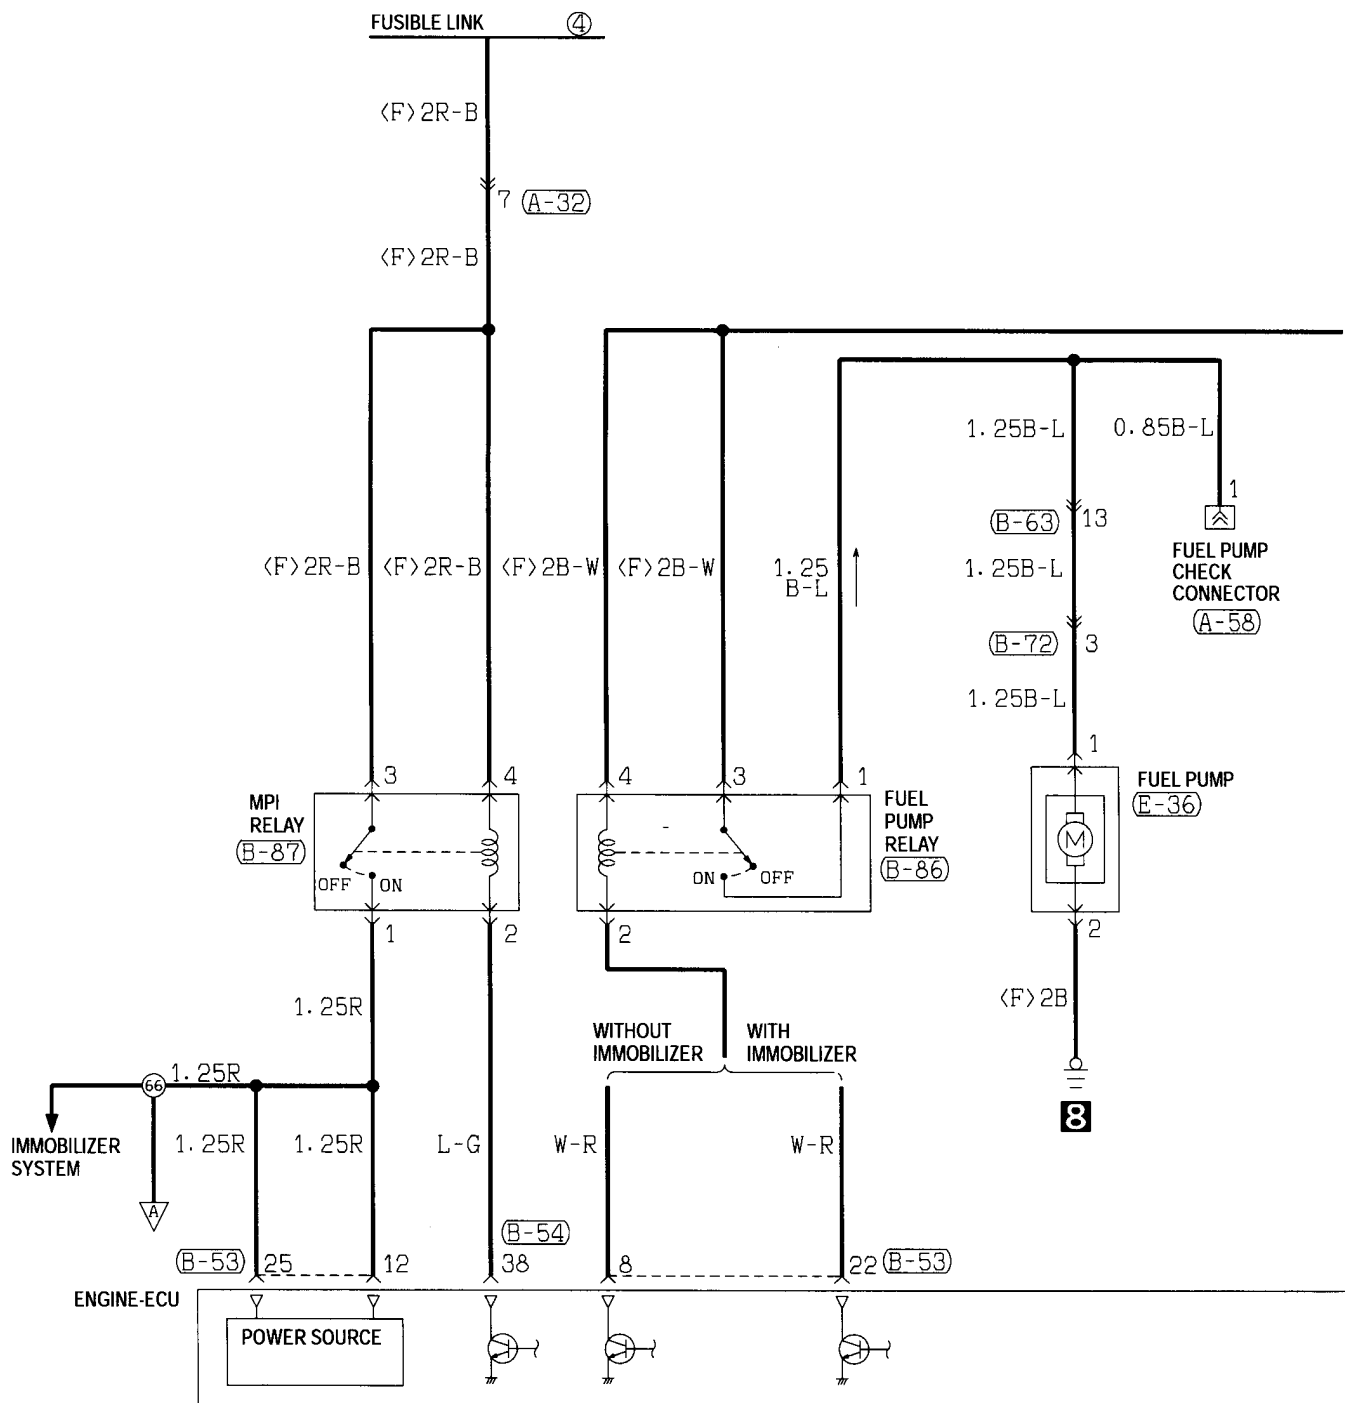

(A-32)

 

(A-58)



(A-59)



(A-62)



 
(A-64)




(A-92)




(B-53)




(B-54)

 

(B-55)

 

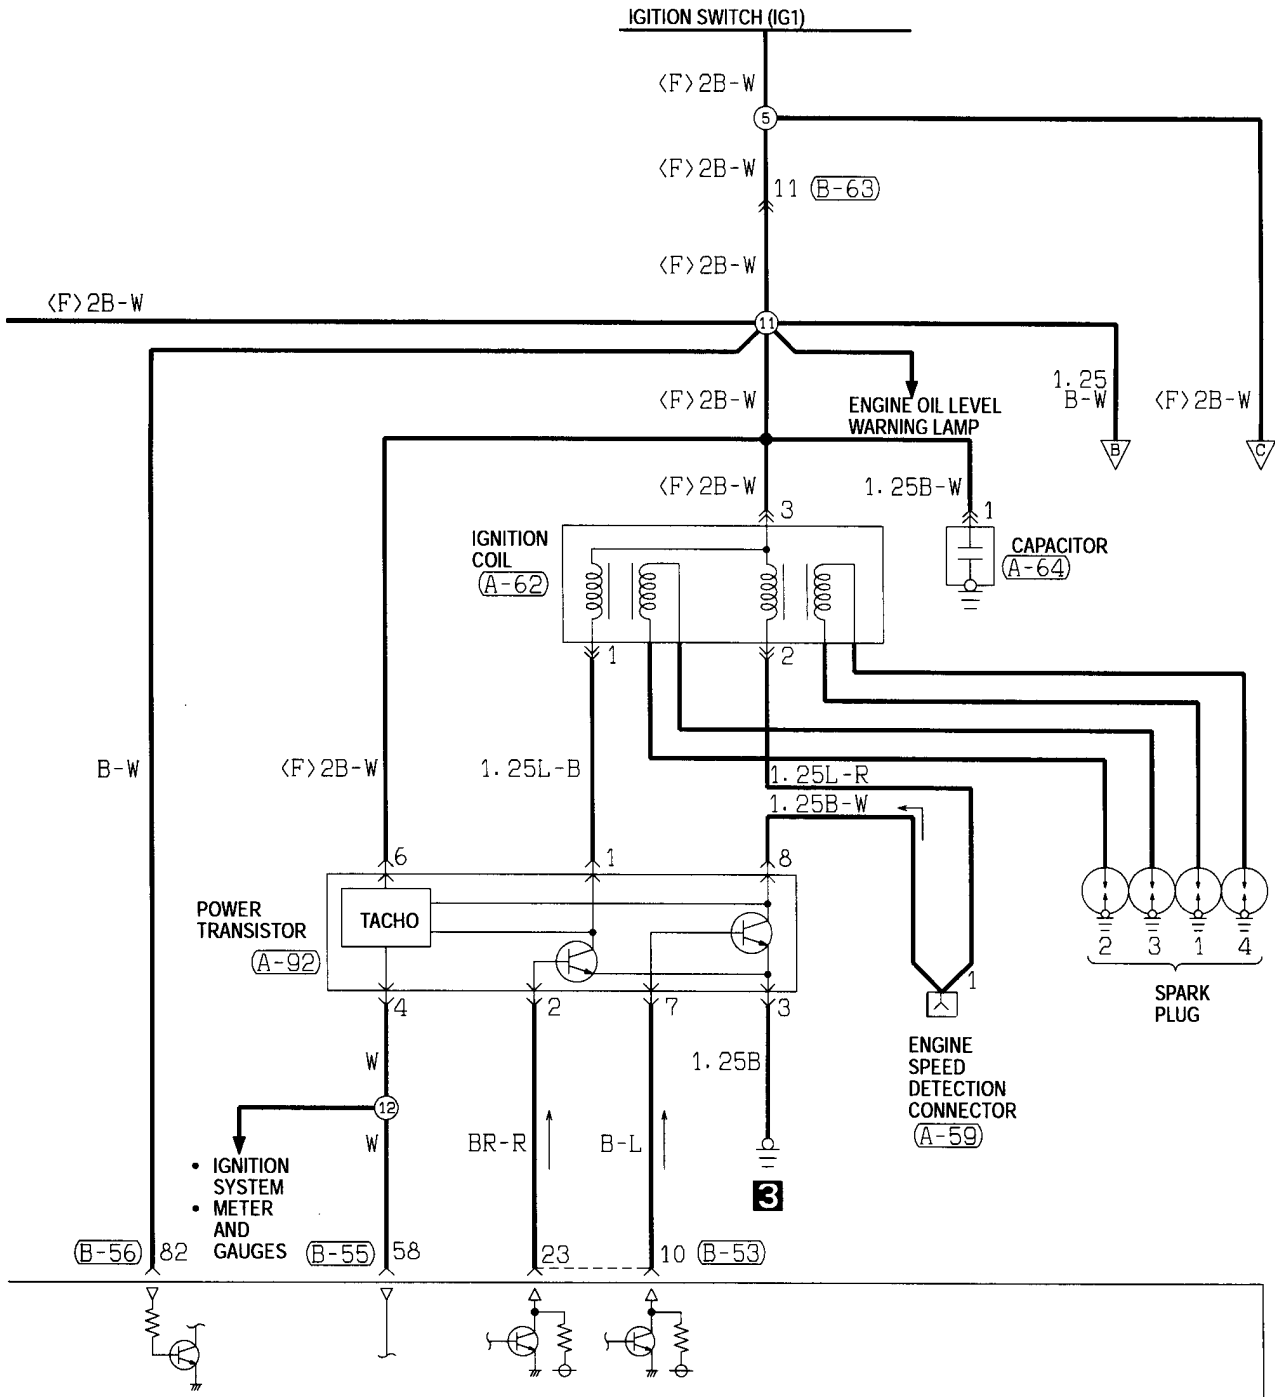

(B-56)

71	72	73	74	75	76	77	78	79	80	81
82	83	84	85	86	87	88	89	90	91	92

(B-63)

1	2	3	4	5	M	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

(B-72)

1	2
3	4

(B-86)

1	2
3	4

(B-87)

1	2
3	4

(E-36)



Wire color code


B : Black
BR : Brown
W : White
V : Violet

LG : Light Green
O : Orange
SB : Sky Blue

G : Green
GR : Gray
P : Pink

L : Blue
R : Red
Y : Yellow

MPI SYSTEM (CONTINUED)

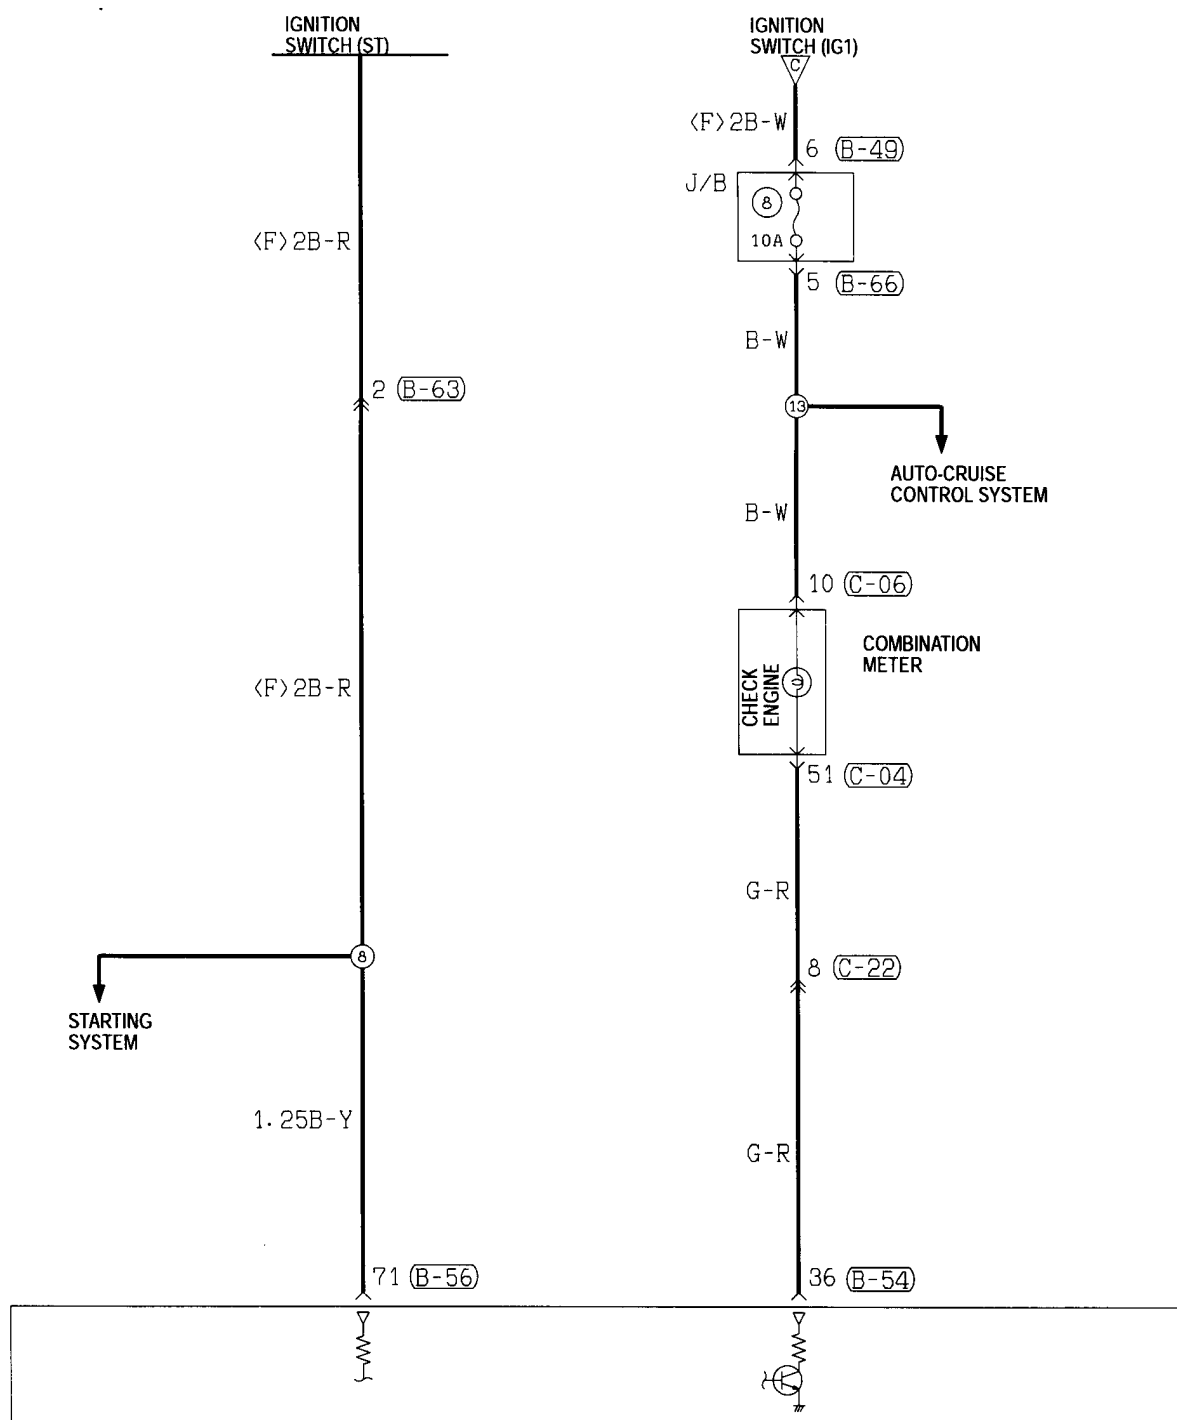

(A-18X)



(A-32)



 
(A-47)



(A-95)



(B-08)




(B-25)



(B-49)



 (B-53)




(C-04)




(C-06)



 (C-22)



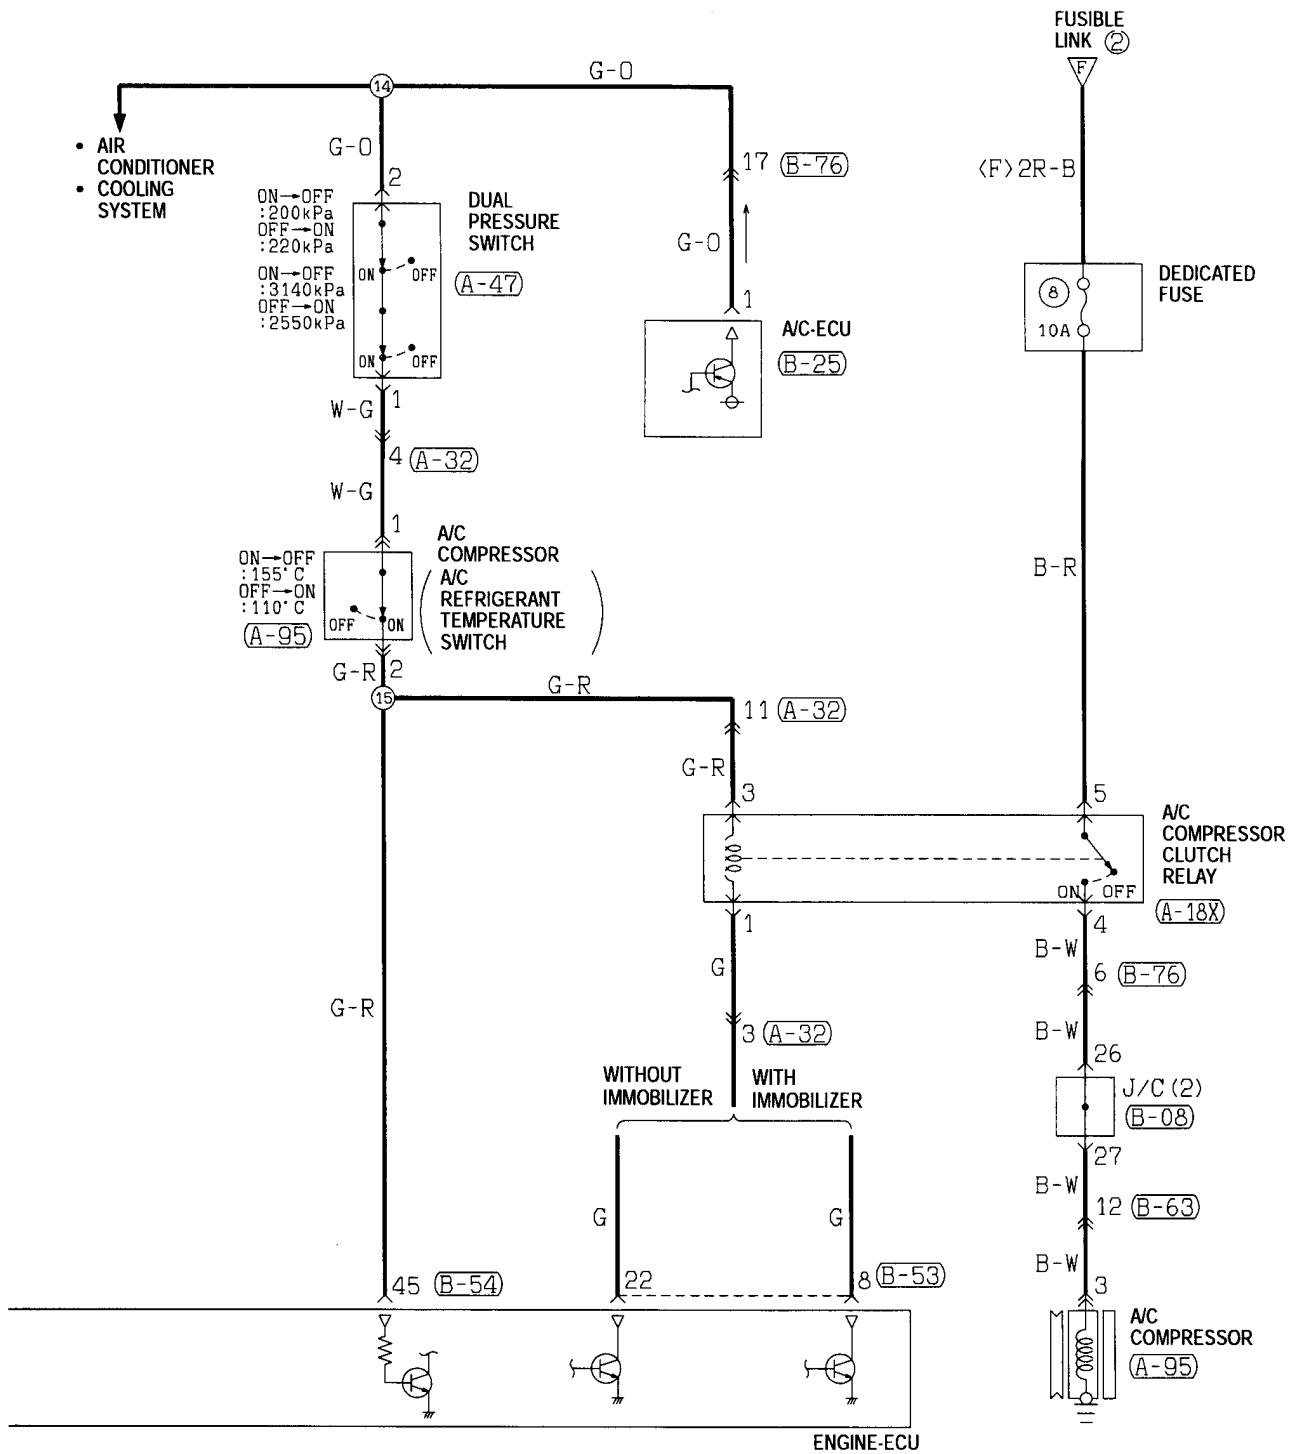

(B-54)

31	32	33	34	35	36	37	38
39	40	41	42	43	44	45	46

Wire color code

B : Black
 BR : Brown
 W : White
 V : Violet

(B-56)

71	72	73	74	75	76	77	78	79	80	81
82	83	84	85	86	87	88	89	90	91	92

LG : Light Green
 O : Orange
 SB : Sky Blue

(B-63)

1	2	3	4	5	☒	6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22

G : Green
 GR : Gray
 P : Pink

(B-66)


1	2	3	4	5		6	7	8	9	10	
11	12	13	14	15	16	17	18	19	20	21	22


L : Blue
 R : Red
 Y : Yellow

(B-76)

1	2	3	4	M	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

MPI SYSTEM (CONTINUED)

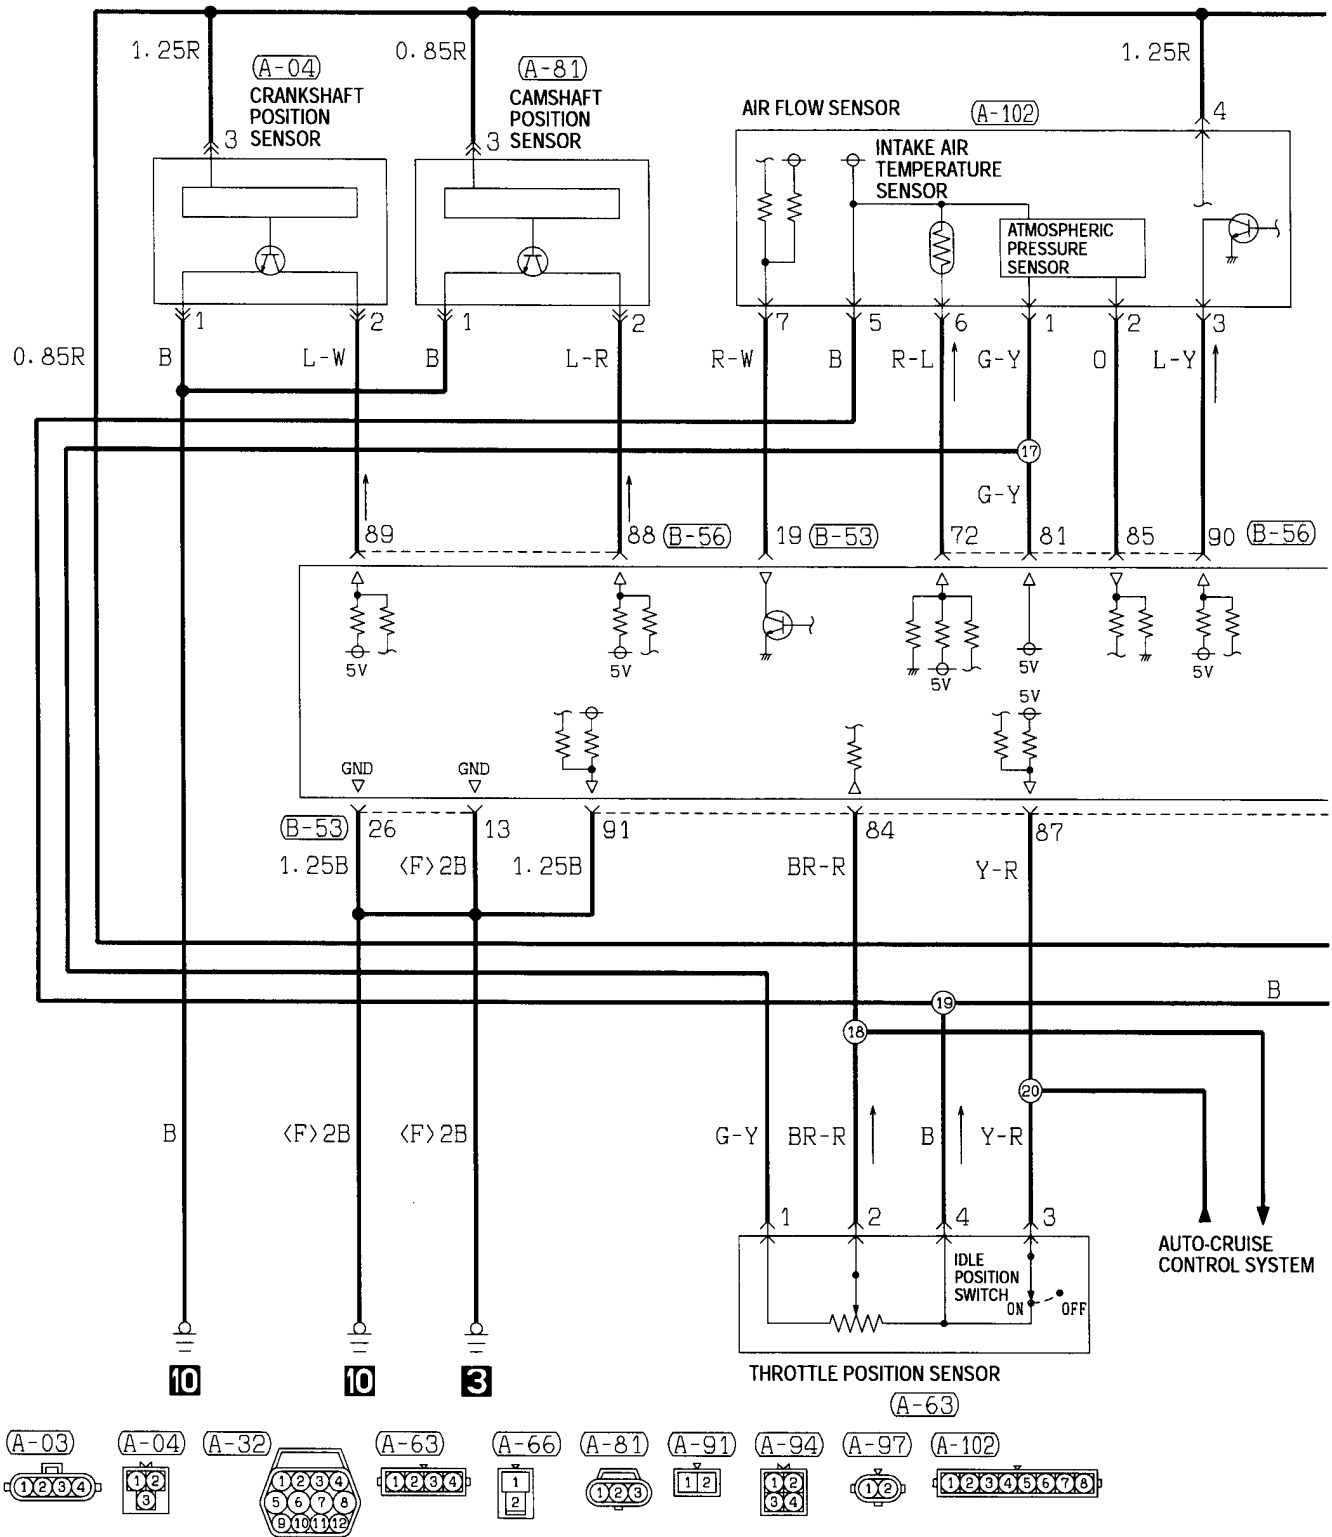


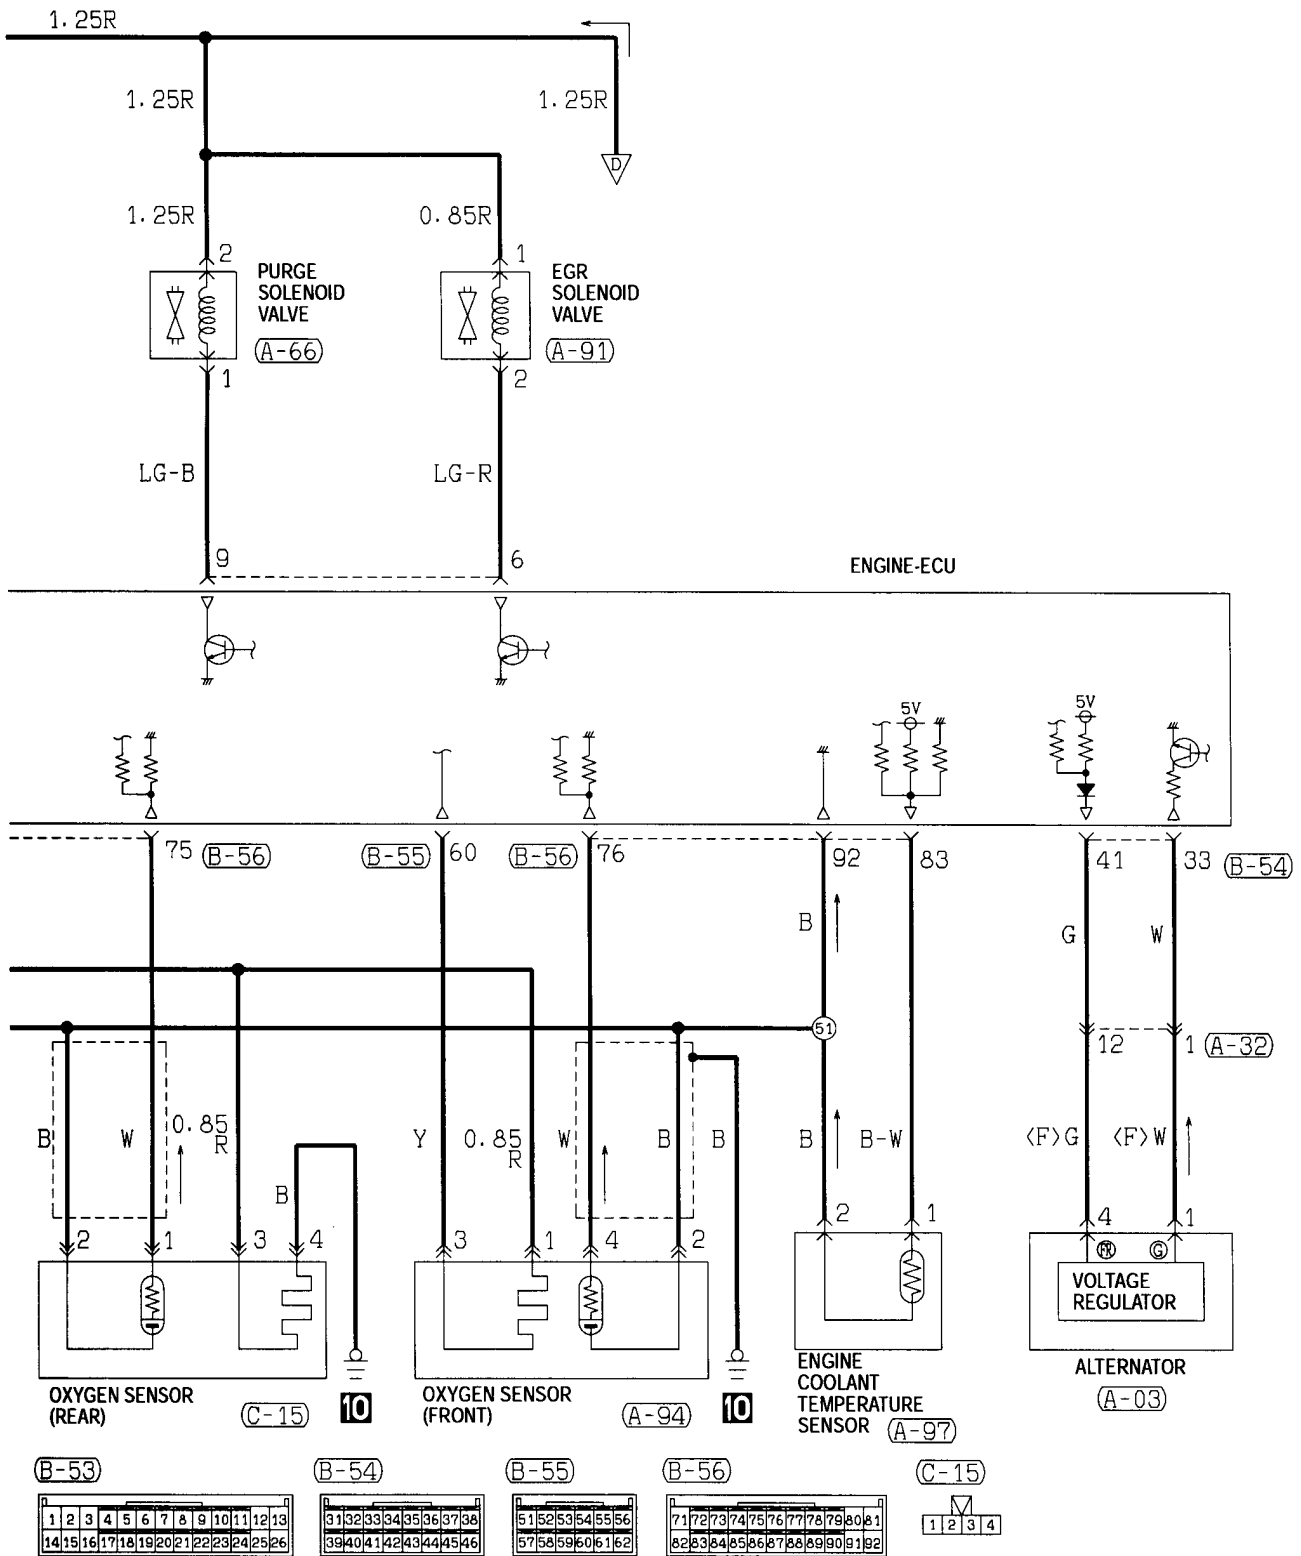


Wire color code


B : Black
 BR : Brown
 W : White
 V : Violet
 LG : Light Green
 O : Orange
 SB : Sky Blue
 G : Green
 GR : Gray
 P : Pink
 L : Blue
 R : Red
 Y : Yellow


MPI SYSTEM (CONTINUED)

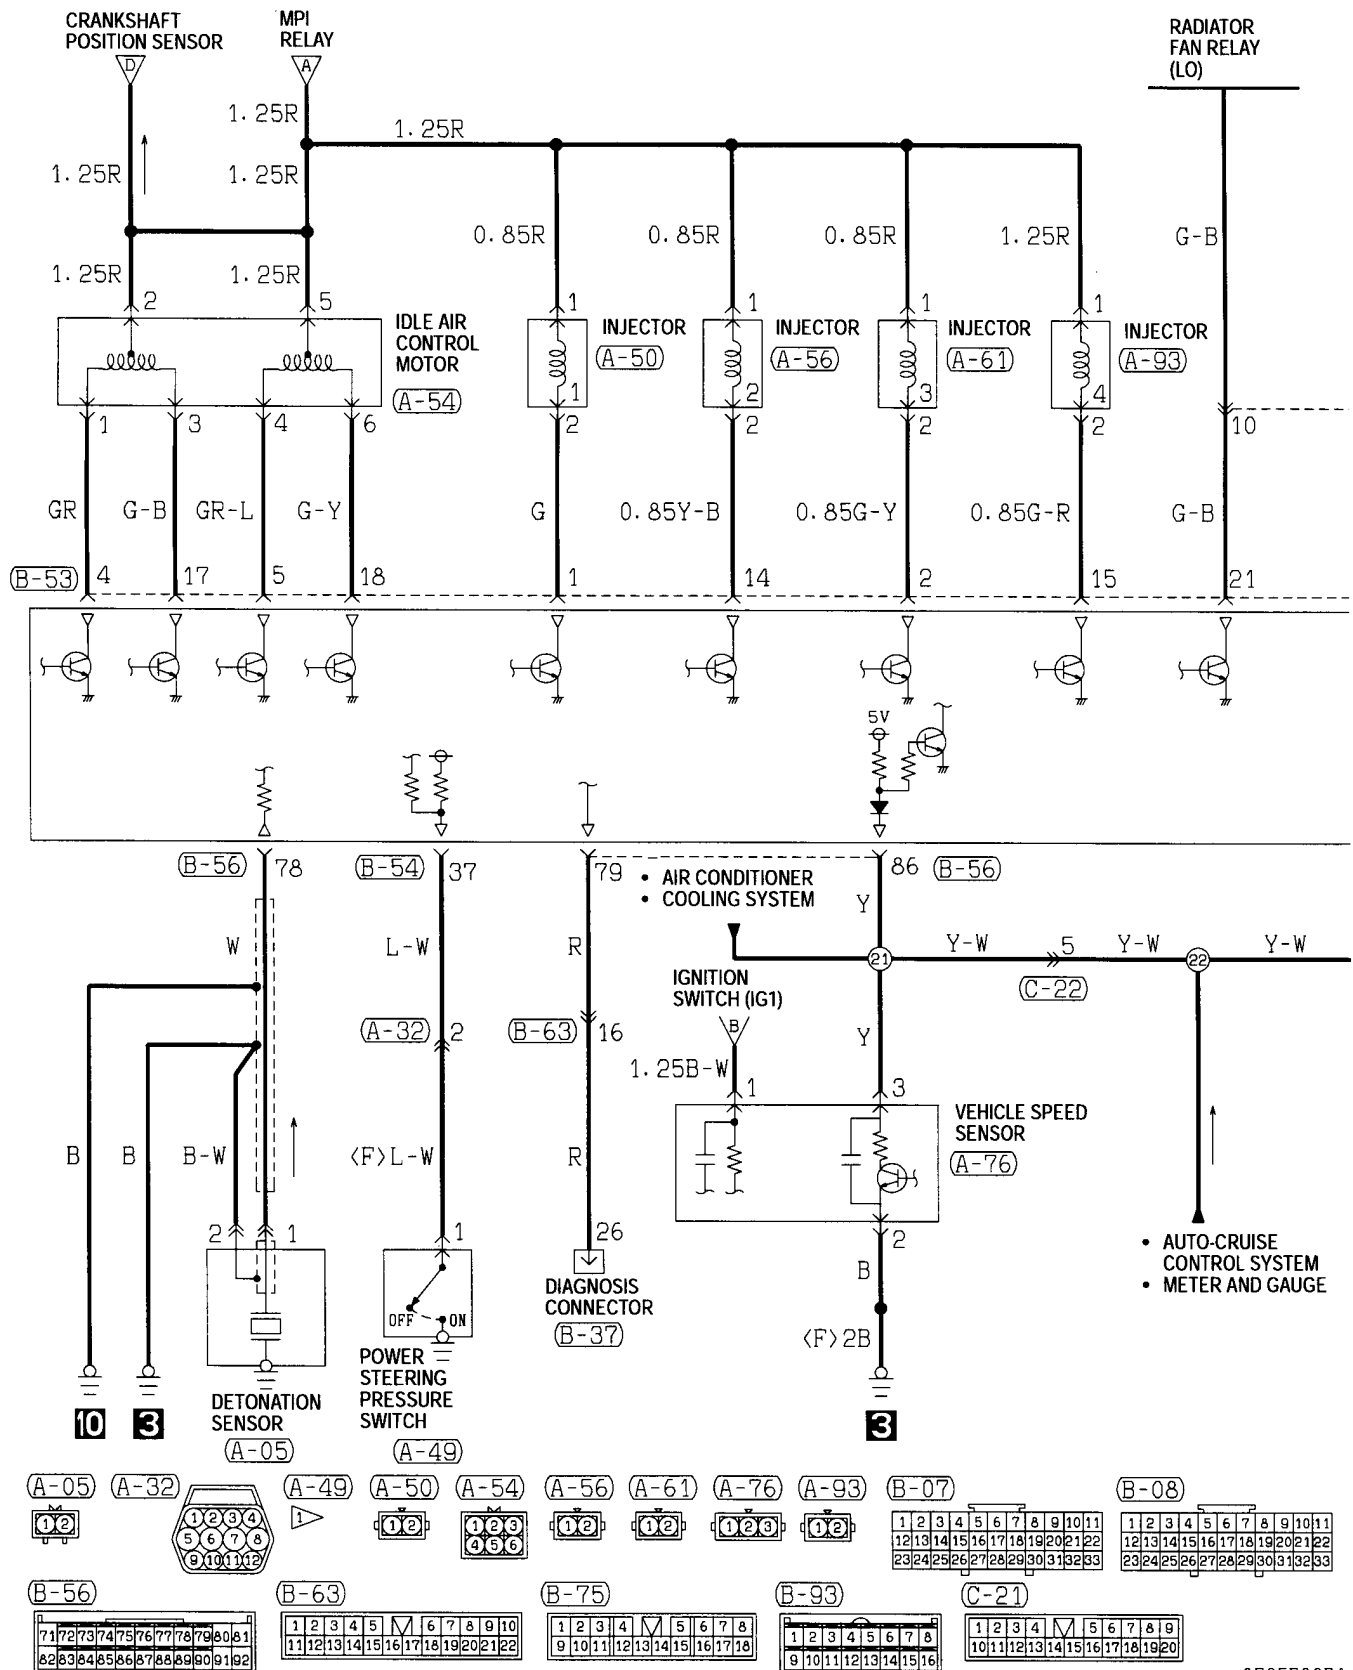

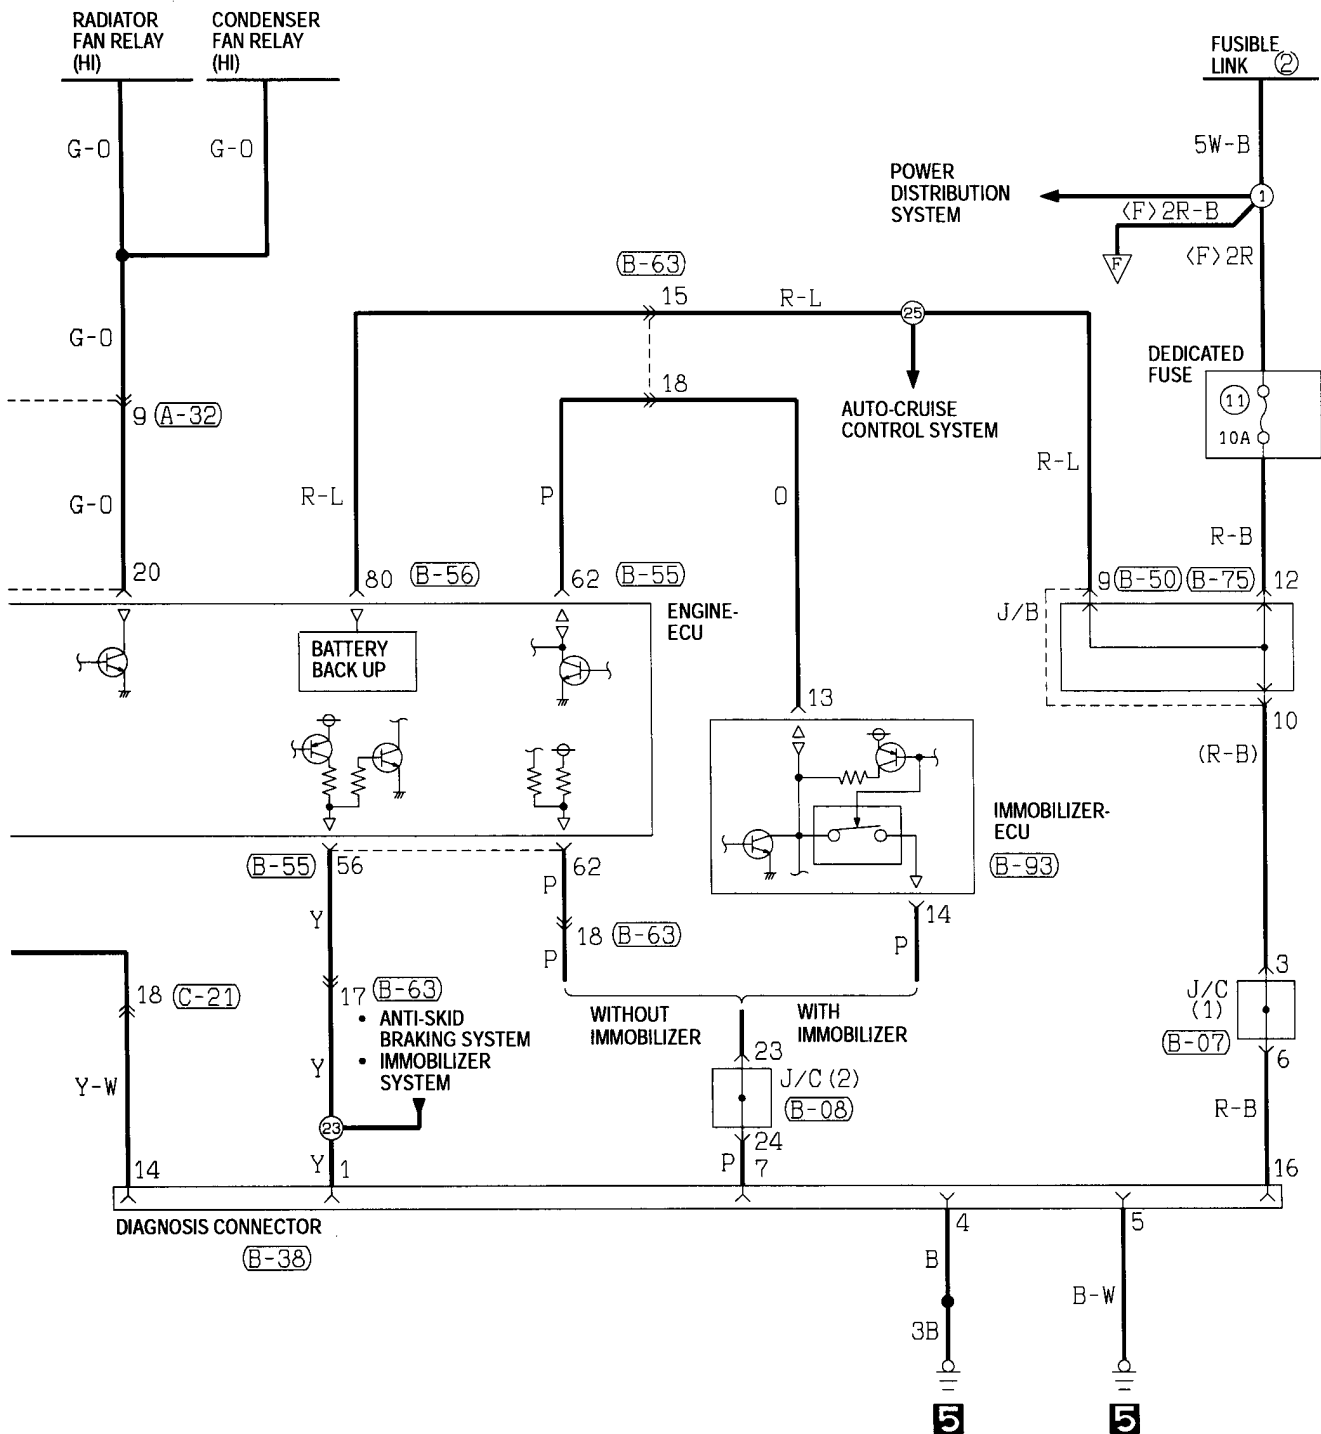

Vehicles without daytime running lamp

 

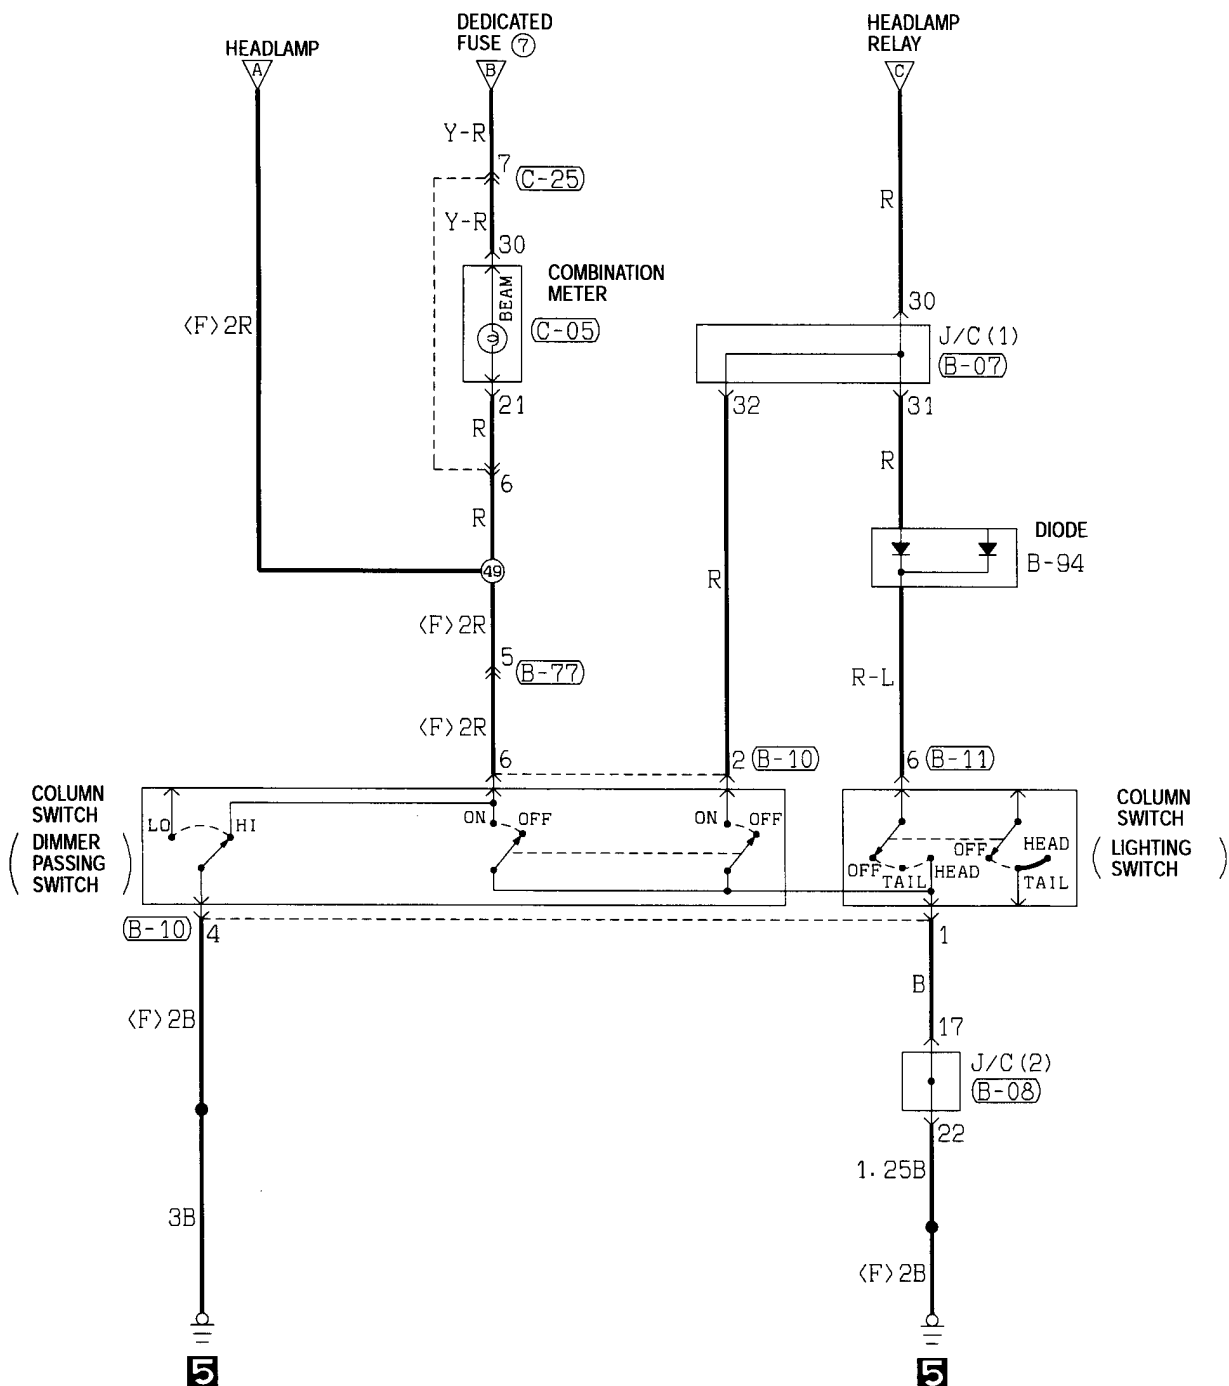

(B-77)

1	2	3
4	5	6
7	8	

(C-05)

21	22	23	24	25	26	27	28
				29			
30	31	32	33	34	35	36	37

(C-25)

1	2	3	4
5	6	7	8
9	10		

Wire color code

 
B : Black
 BR : Brown
 W : White
 V : Violet


LG : Light Green
 O : Orange
 SB : Sky Blue

 
G : Green
 GR : Gray
 P : Pink

L : Blue
 R : Red
 Y : Yellow

Vehicles with daytime running lamp







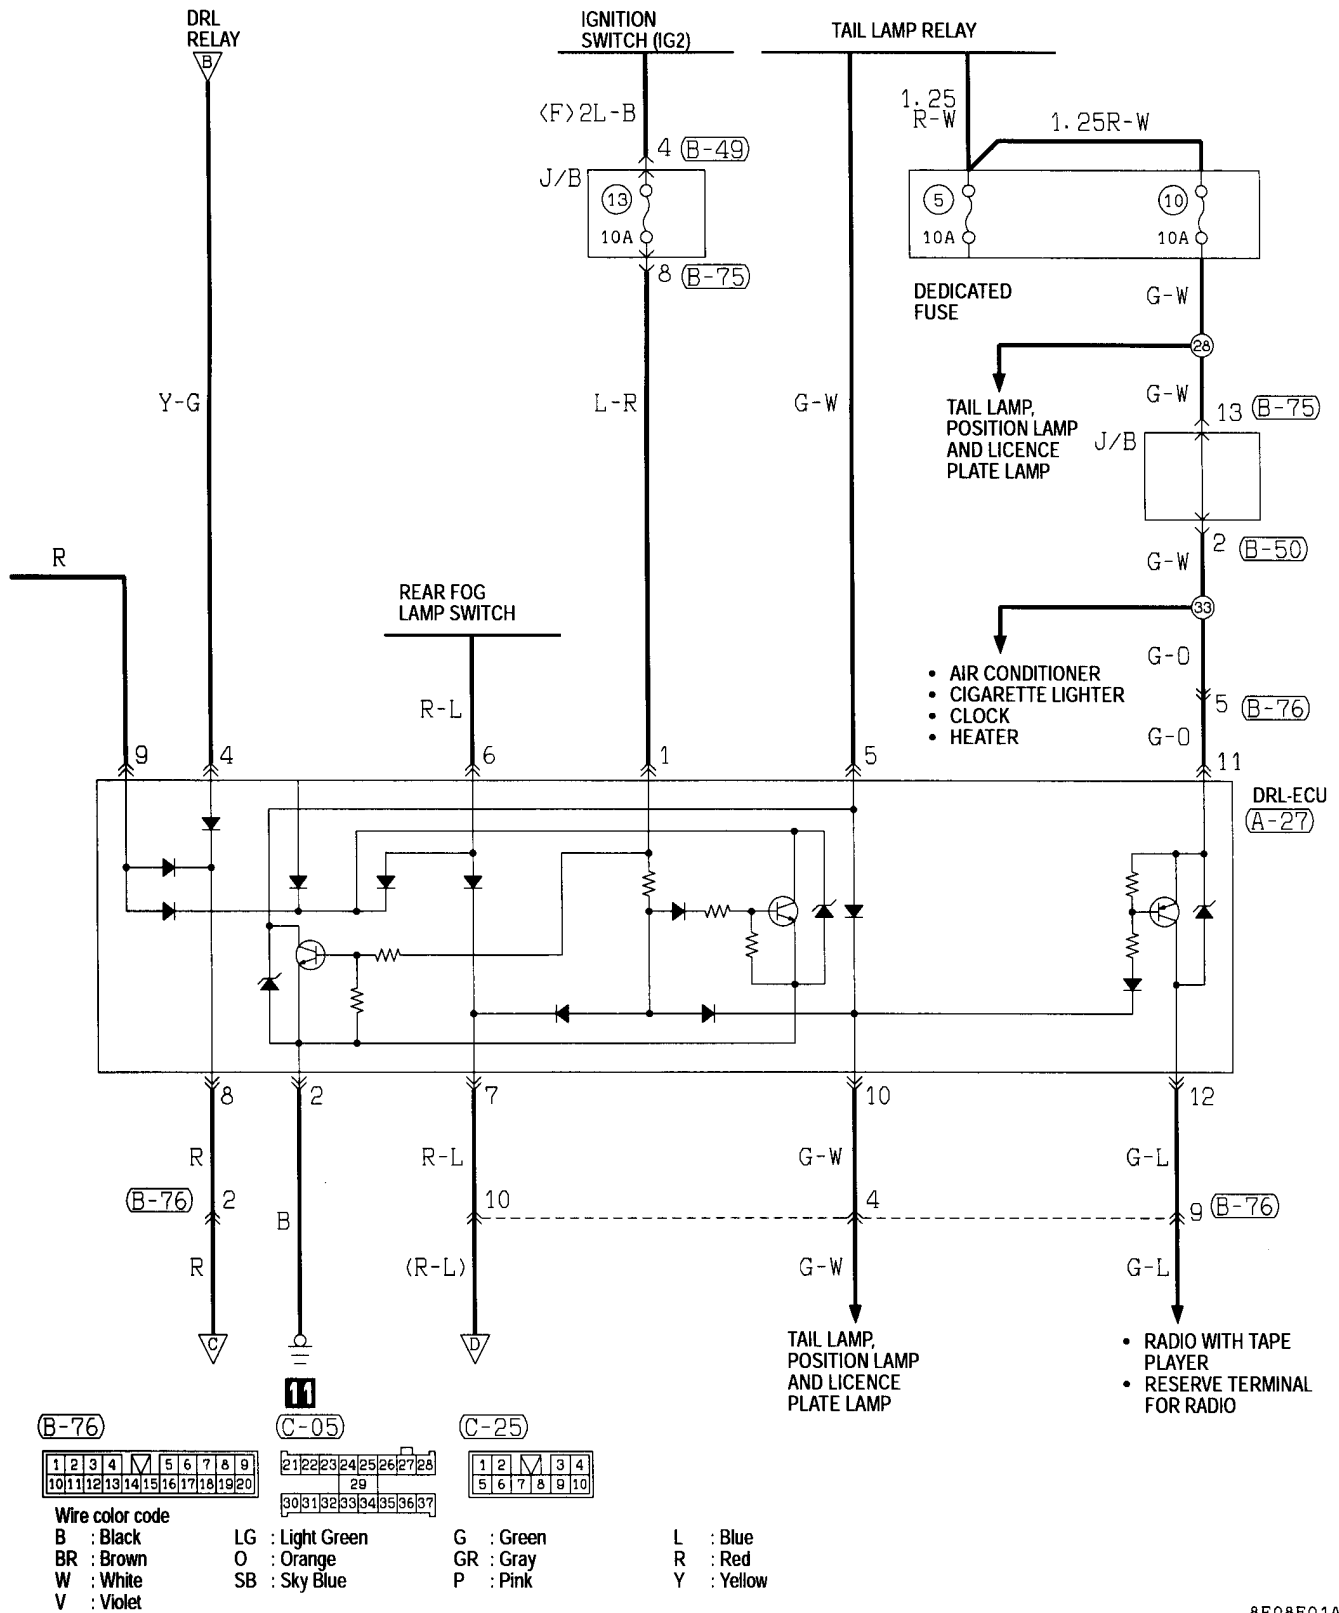





8F08E01BA

NOTES

    STOP LAMP

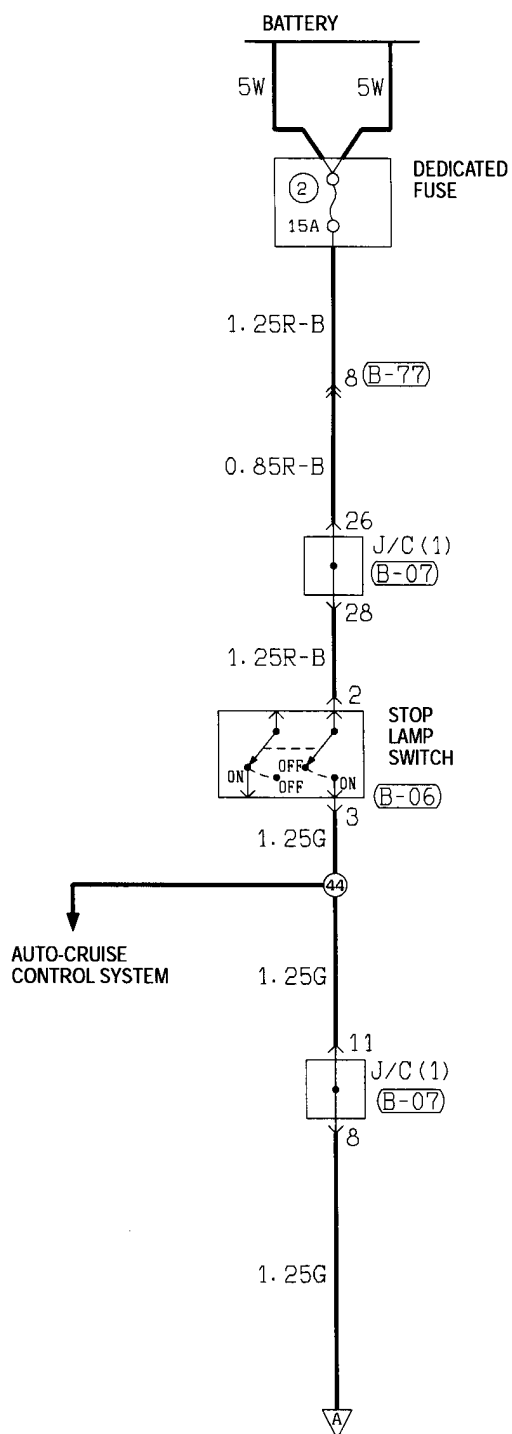

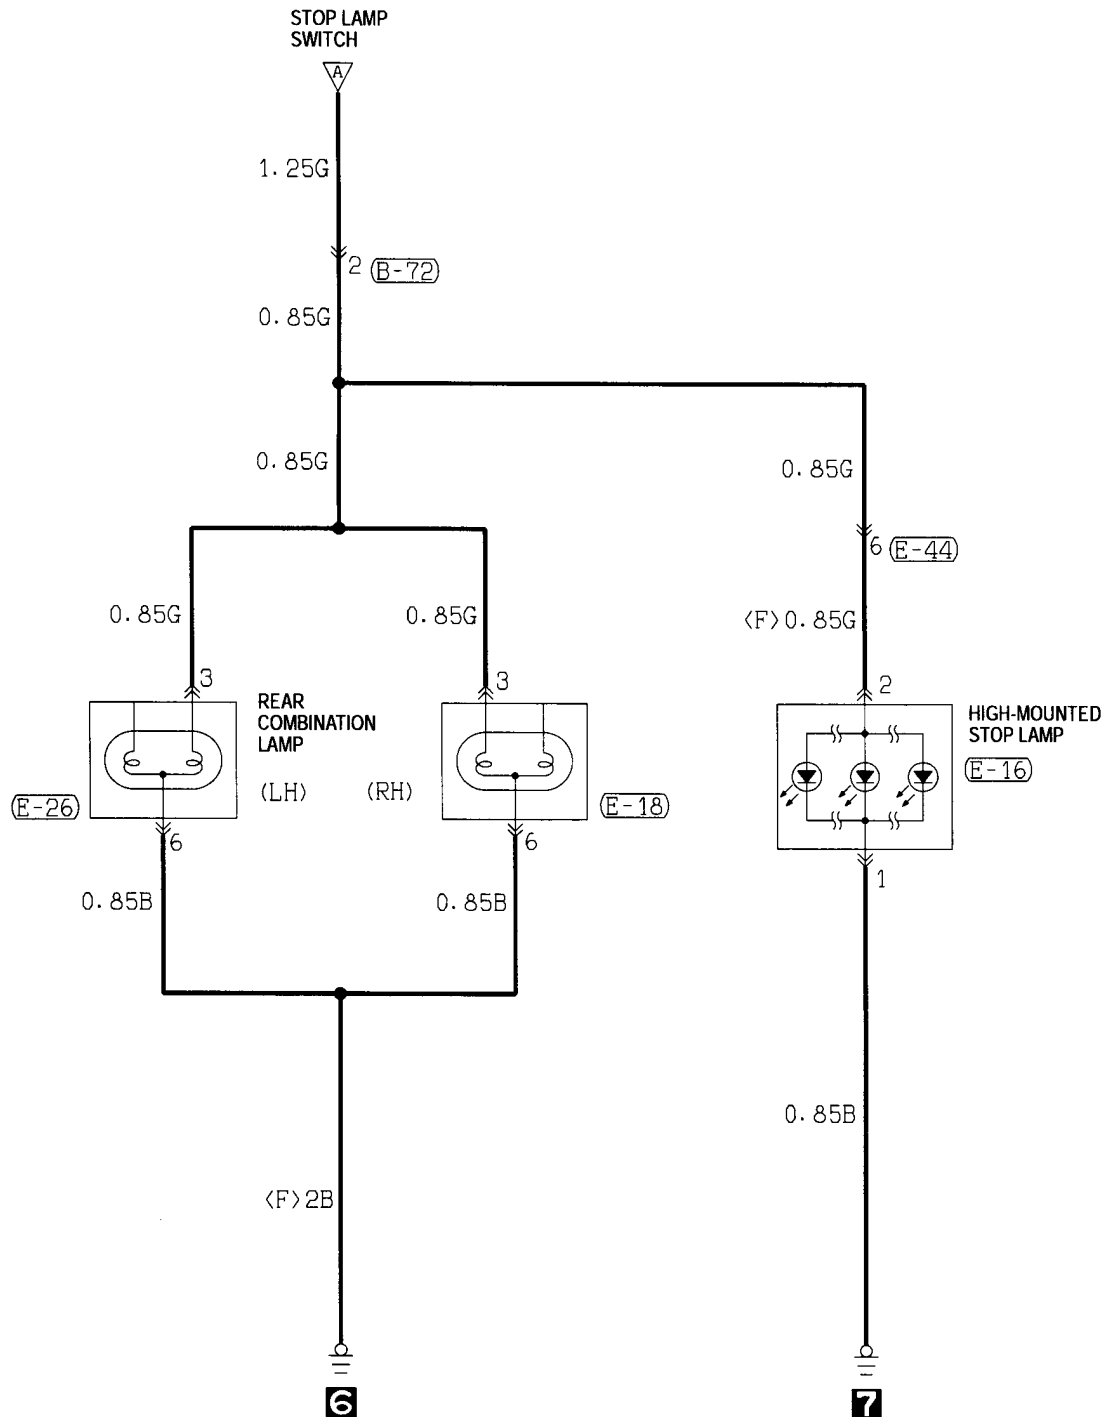

Wire color code

B : Black
 BR : Brown
 W : White
 V : Violet

LG : Light Green
 O : Orange
 SB : Sky Blue

G : Green
 GR : Gray
 P : Pink

L : Blue
 R : Red
 Y : Yellow

Wiring diagram for the 1975-76 Ford Bronco, showing the electrical system layout. The diagram includes a battery (A-26) connected to a fuse block (A-96) and a combination meter (C-04). The fuse block contains a 10A fuse (B-75) for the tail lamp, position lamp, and license plate lamp, and a 5A fuse (B-66) for the auto-cruise control system and fog lamp. The combination meter includes a tachometer (T), an oil pressure gauge (O/GA), and an illumination meter (ILL). The diagram also shows a rheostat (C-23) for the interior lighting (ILL) and a tail lamp relay. The wiring is color-coded: G-W (Green-White), B-Y (Blue-Yellow), and B (Black).

Key components and wiring details:


- Battery (A-26):** Connected to the main power line.
- Fuse Block (A-96):** Contains fuses for various systems:
 - 10A Fuse (B-75): Tail Lamp, Position Lamp, and License Plate Lamp.
 - 5A Fuse (B-66): Auto-Cruise Control System and Fog Lamp.
- Combination Meter (C-04):** Includes a tachometer (T), an oil pressure gauge (O/GA), and an illumination meter (ILL).
- Rheostat (C-23):** Controls the interior lighting (ILL).
- Wiring Colors:** G-W (Green-White), B-Y (Blue-Yellow), and B (Black).

Legend for component locations:

Component	Location
A-26	41 42 43 44 45 46 47 48
A-96	1 2 3 4 5 6 7 8 9 10
A-118	1 2 3 4 5 6 7 8 9 10
B-49	1 2 3 4 5 6 7 8 9 10
B-66	1 2 3 4 5 6 7 8 9 10
B-71	1 2 3 4 5 6 7 8 9 10
B-75	1 2 3 4 5 6 7 8 9 10

Legend for component locations (continued):

Component	Location
C-04	41 42 43 44 45 46 47 48
C-23	1 2 3 4 5 6 7 8 9 10
C-25	1 2 3 4 5 6 7 8 9 10

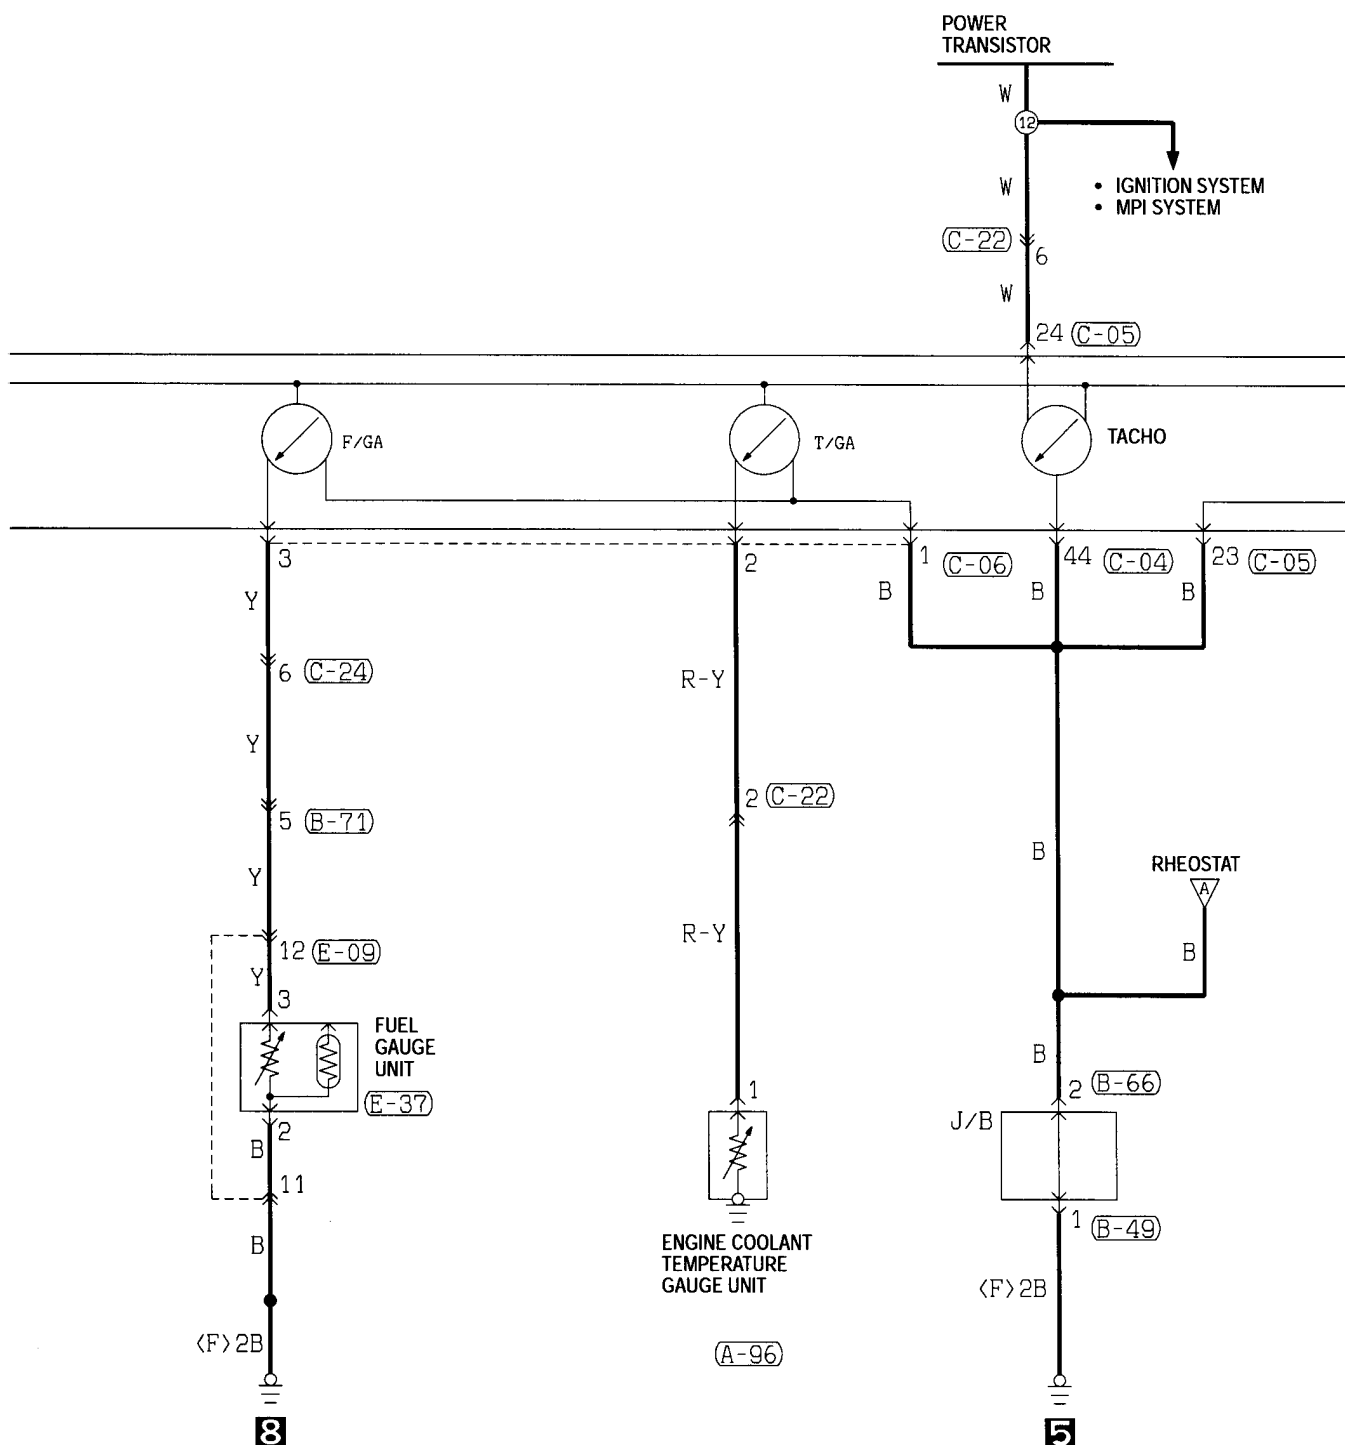

(C-05)

21	22	23	24	25	26	27	28
29							
30	31	32	33	34	35	36	37

Wire color code

B : Black
 BR : Brown
 W : White
 V : Violet

(C-06)

1	2	3	4	5	6	7	8
9							
10	11	12	13	14	15	16	17

LG : Light Green
 O : Orange
 SB : Sky Blue

(C-22)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

G : Green
 GR : Gray
 P : Pink

(C-23)

1	2	3	4
---	---	---	---

L : Blue
 R : Red
 Y : Yellow

(C-24)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(C-25)

1	2	3
4	5	6
7	8	


(E-09)

1	2	3	4
5	6	7	8
9	10	11	12

(E-37)

1	2	3
---	---	---

METER AND GAUGES (CONTINUED)

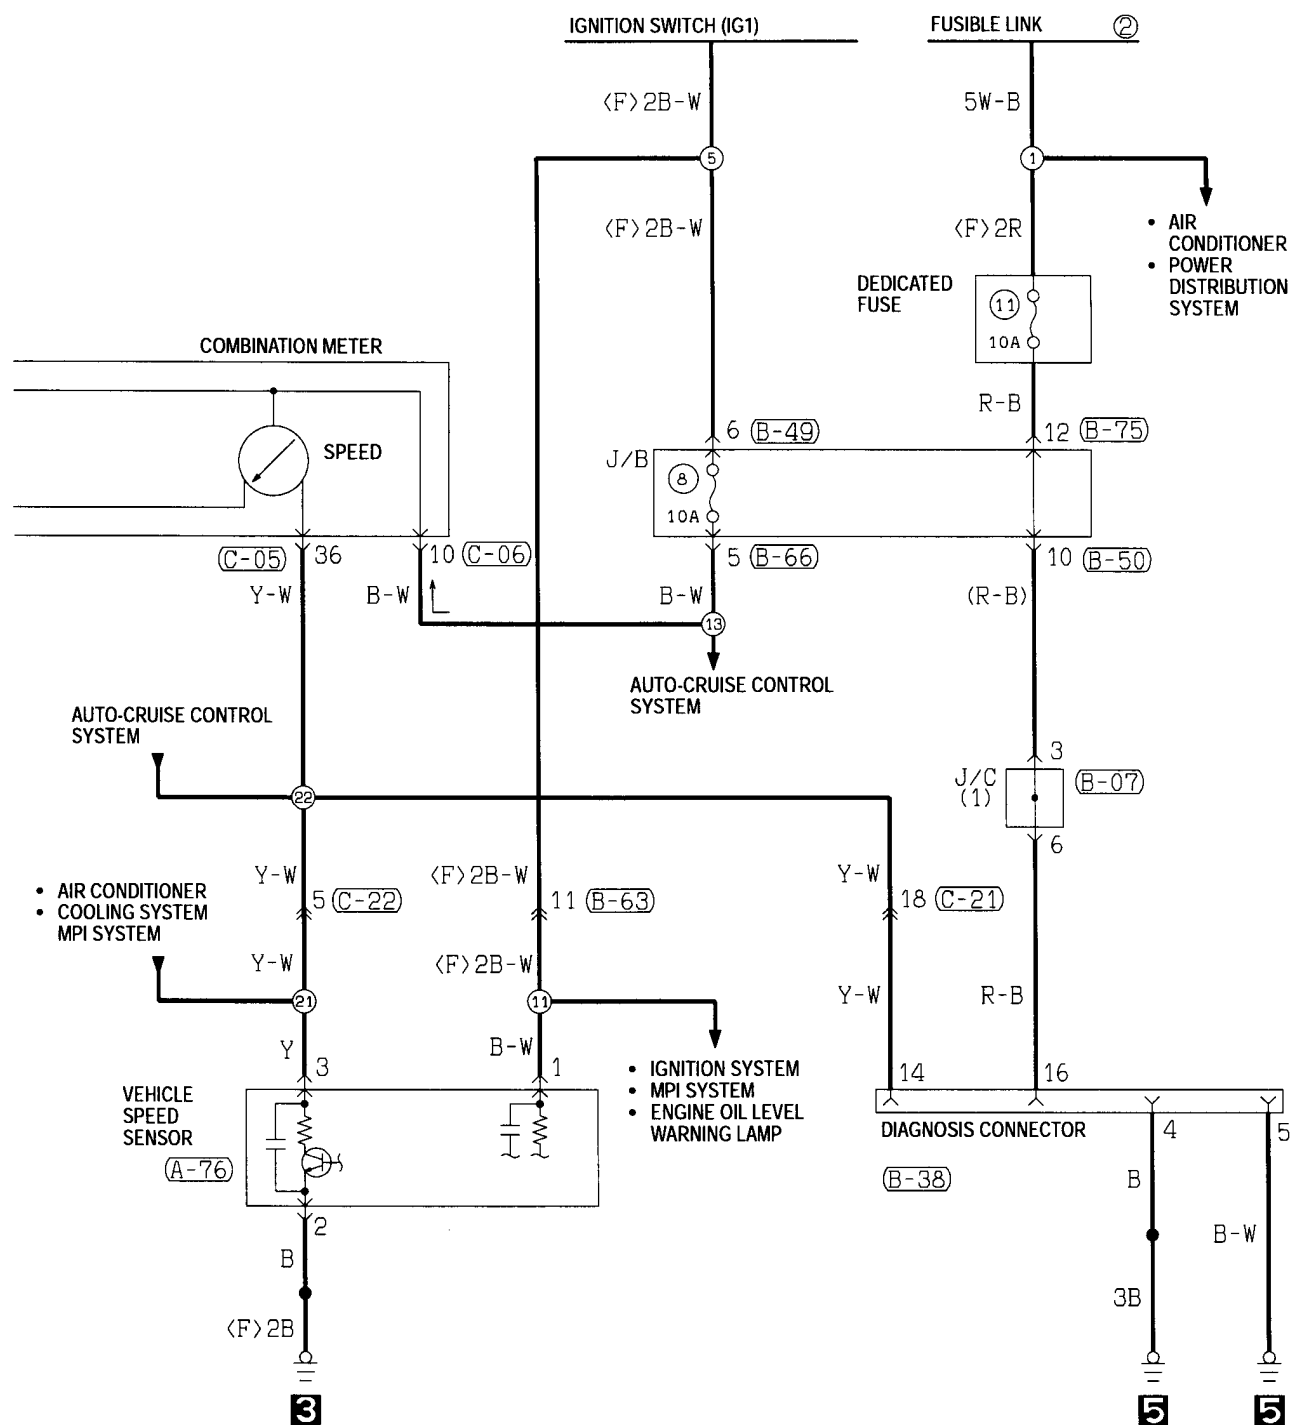

(A-76)

(B-07)

(B-38) FRONT SIDE

(B-49)

(B-50)

(B-63)

(B-66)

(B-75)


(C-05)

(C-06)


(C-21)

(C-22)


FUEL WARNING LAMP

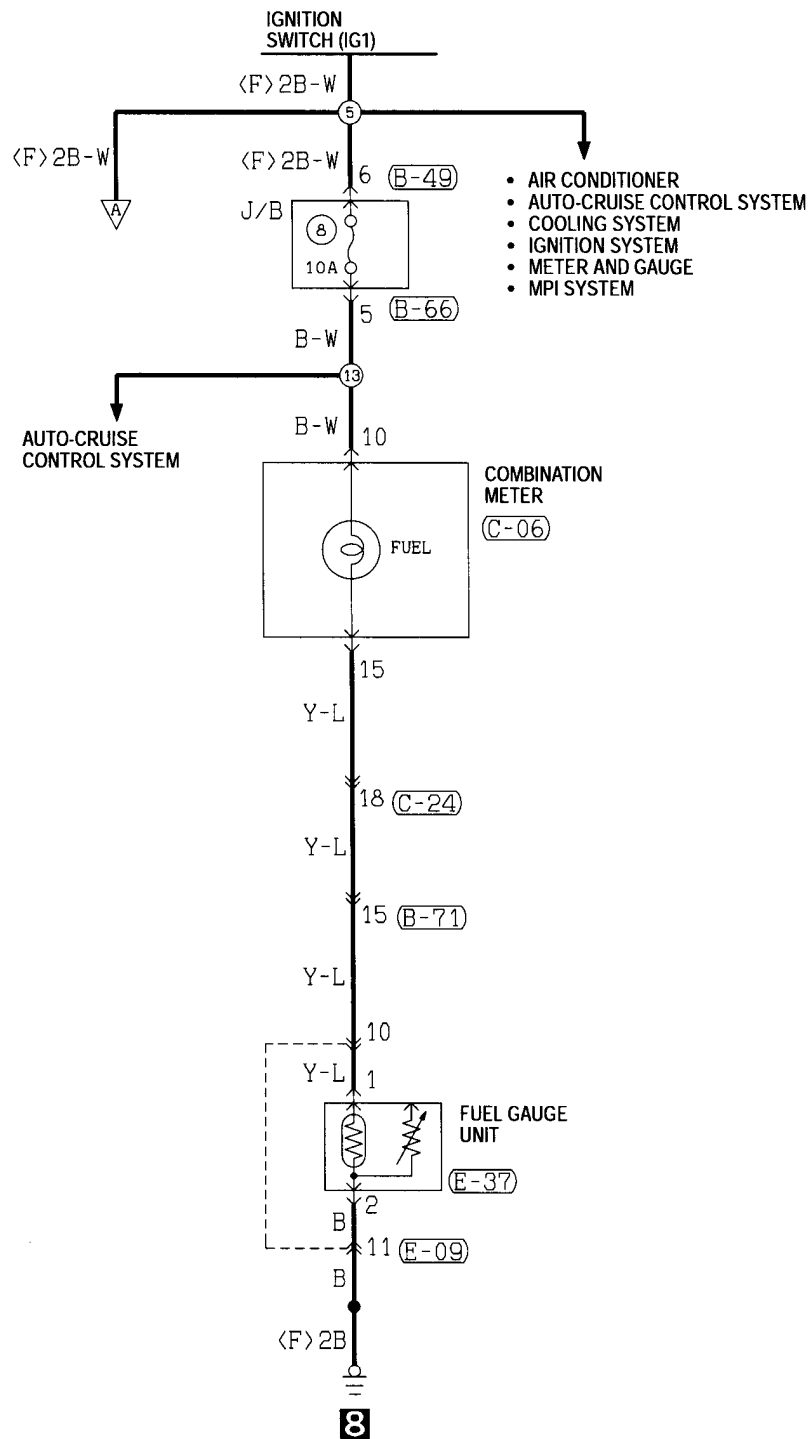


B-49

 


B-66

 


B-71

 

C-06

 

C-24

 

E-09



E-37



Wire color code


B : Black
BR : Brown
W : White
V : Violet

LG : Light Green
O : Orange
SB : Sky Blue


G : Green
GR : Gray
P : Pink

L : Blue
R : Red
Y : Yellow


ANTI-SKID BRAKING SYSTEM (ABS)

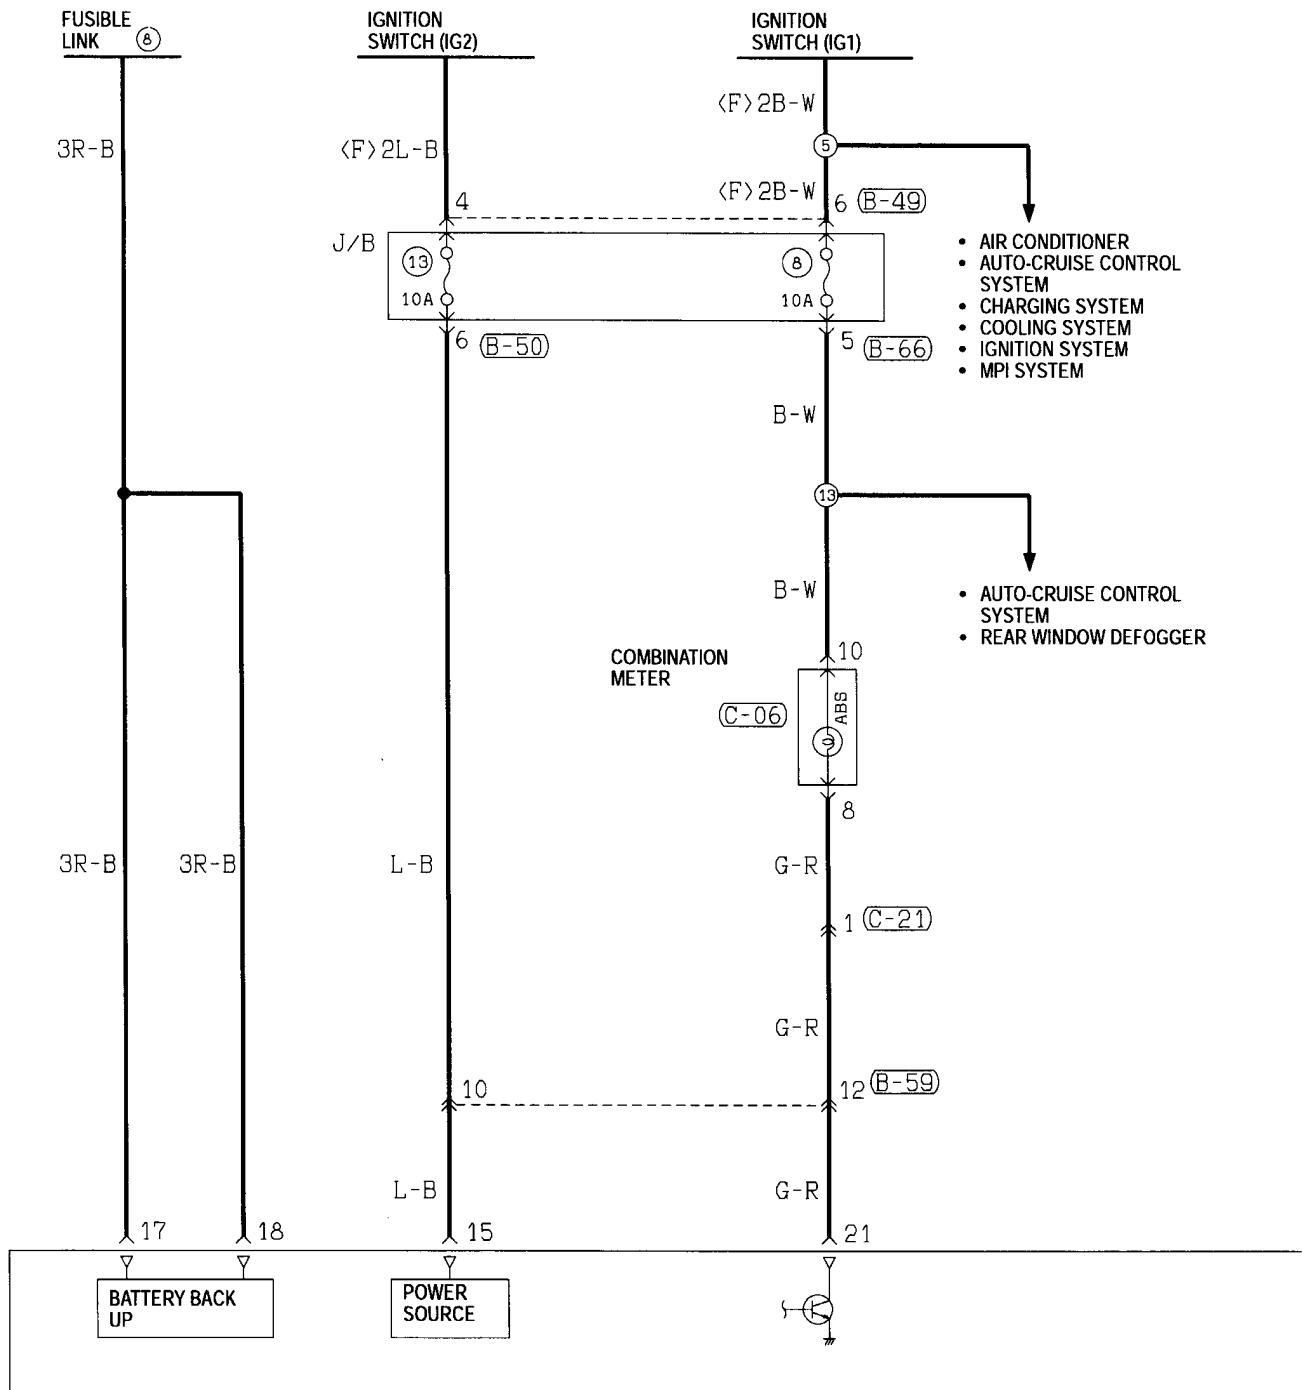


(A-24)

 


(B-49)

 


(B-50)

 


(B-59)

 


(B-66)

 

(C-06)

 

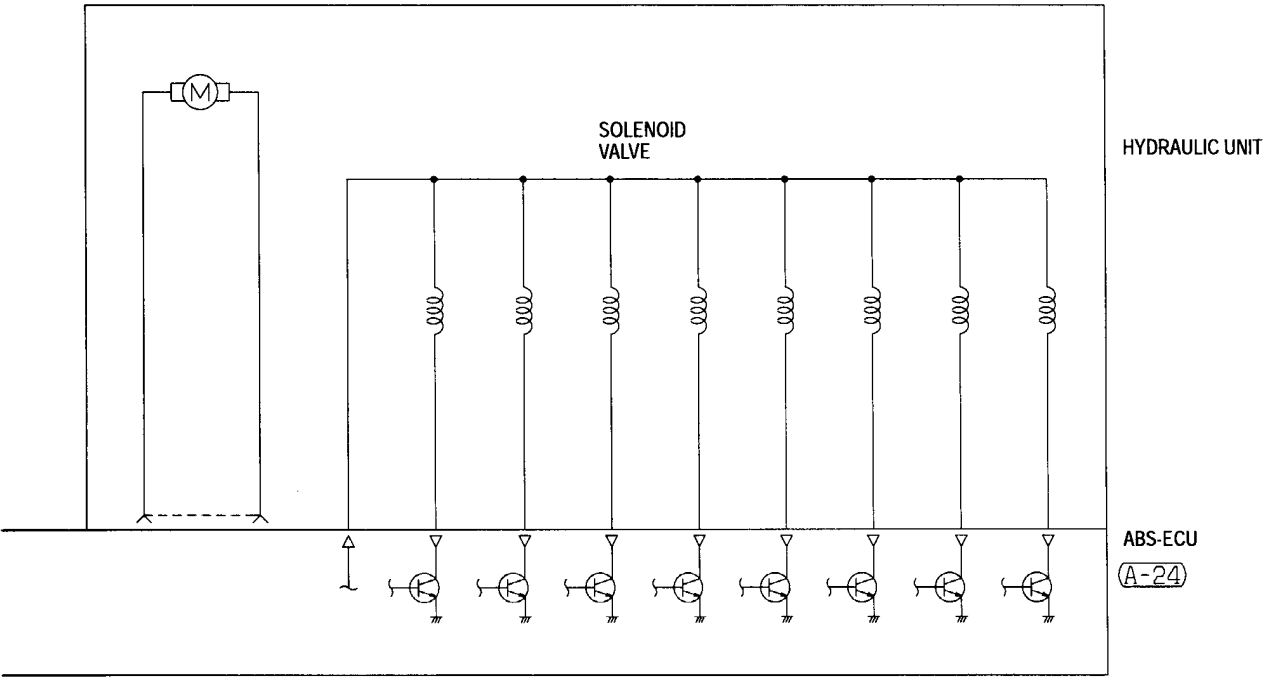

C-21


1	2	3	4	☒	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	19	20

Wire color code
B : Black
BR : Brown
W : White
V : Violet


LG : Light Green
O : Orange
SB : Sky Blue

G : Green
GR : Gray
P : Pink

 
L : Blue
R : Red
Y : Yellow



ABS WHEEL-SPEED SENSOR

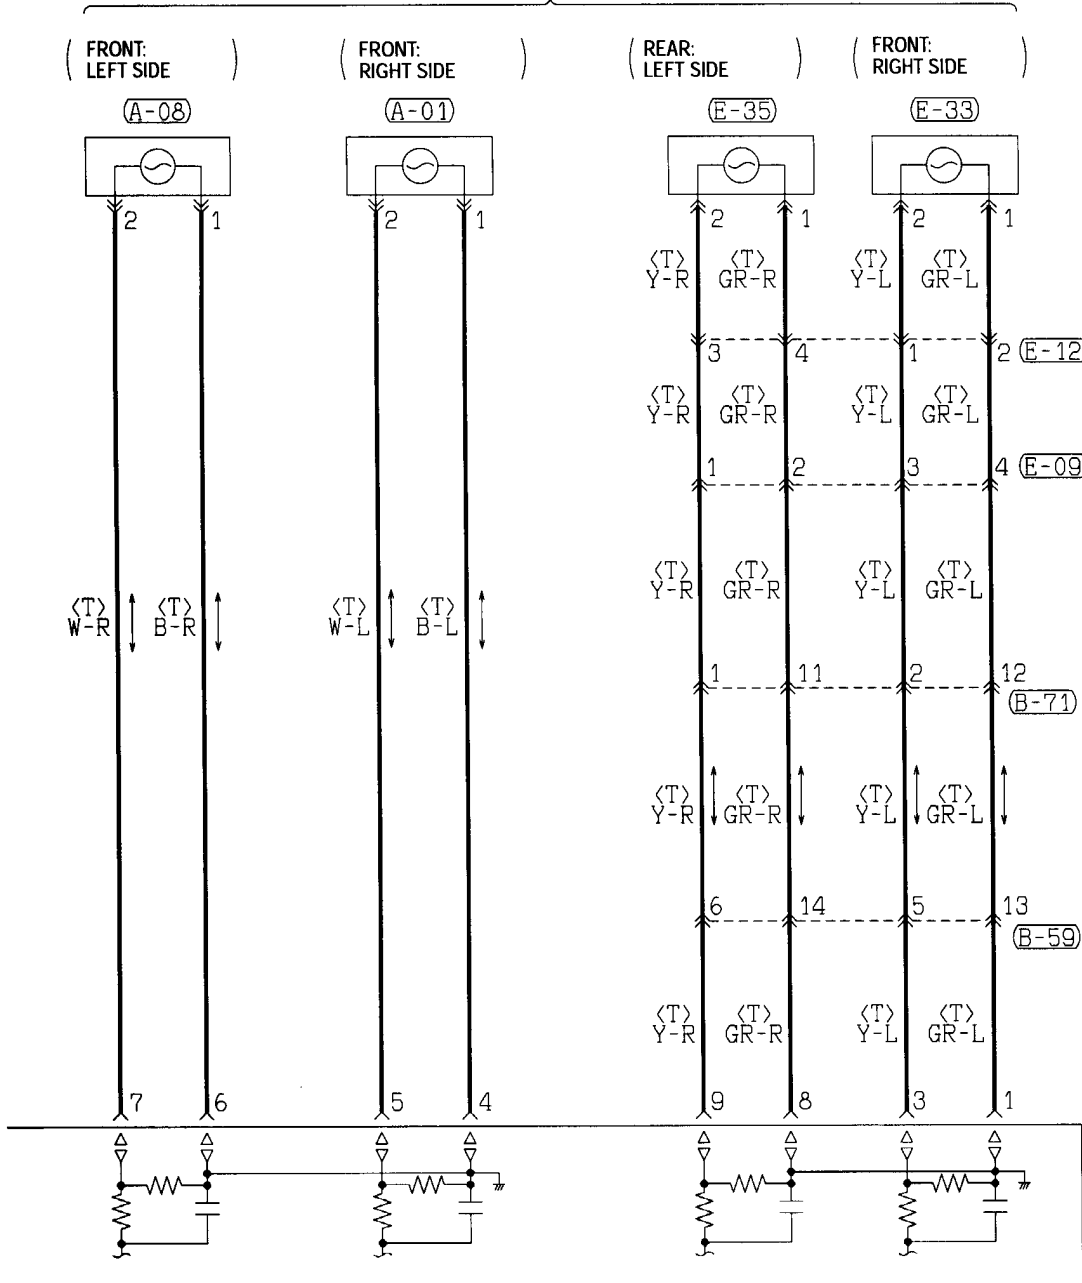

(B-77)

 

(E-09)



(E-12)



(E-33)



(E-35)



Wire color code

 
 
 
 
 
 
 

B : Black
BR : Brown
W : White
V : Violet

LG : Light Green
O : Orange
SB : Sky Blue

G : Green
GR : Gray
P : Pink

L : Blue
R : Red
Y : Yellow

ANTI-SKID BRAKING SYSTEM (ABS) (CONTINUED)

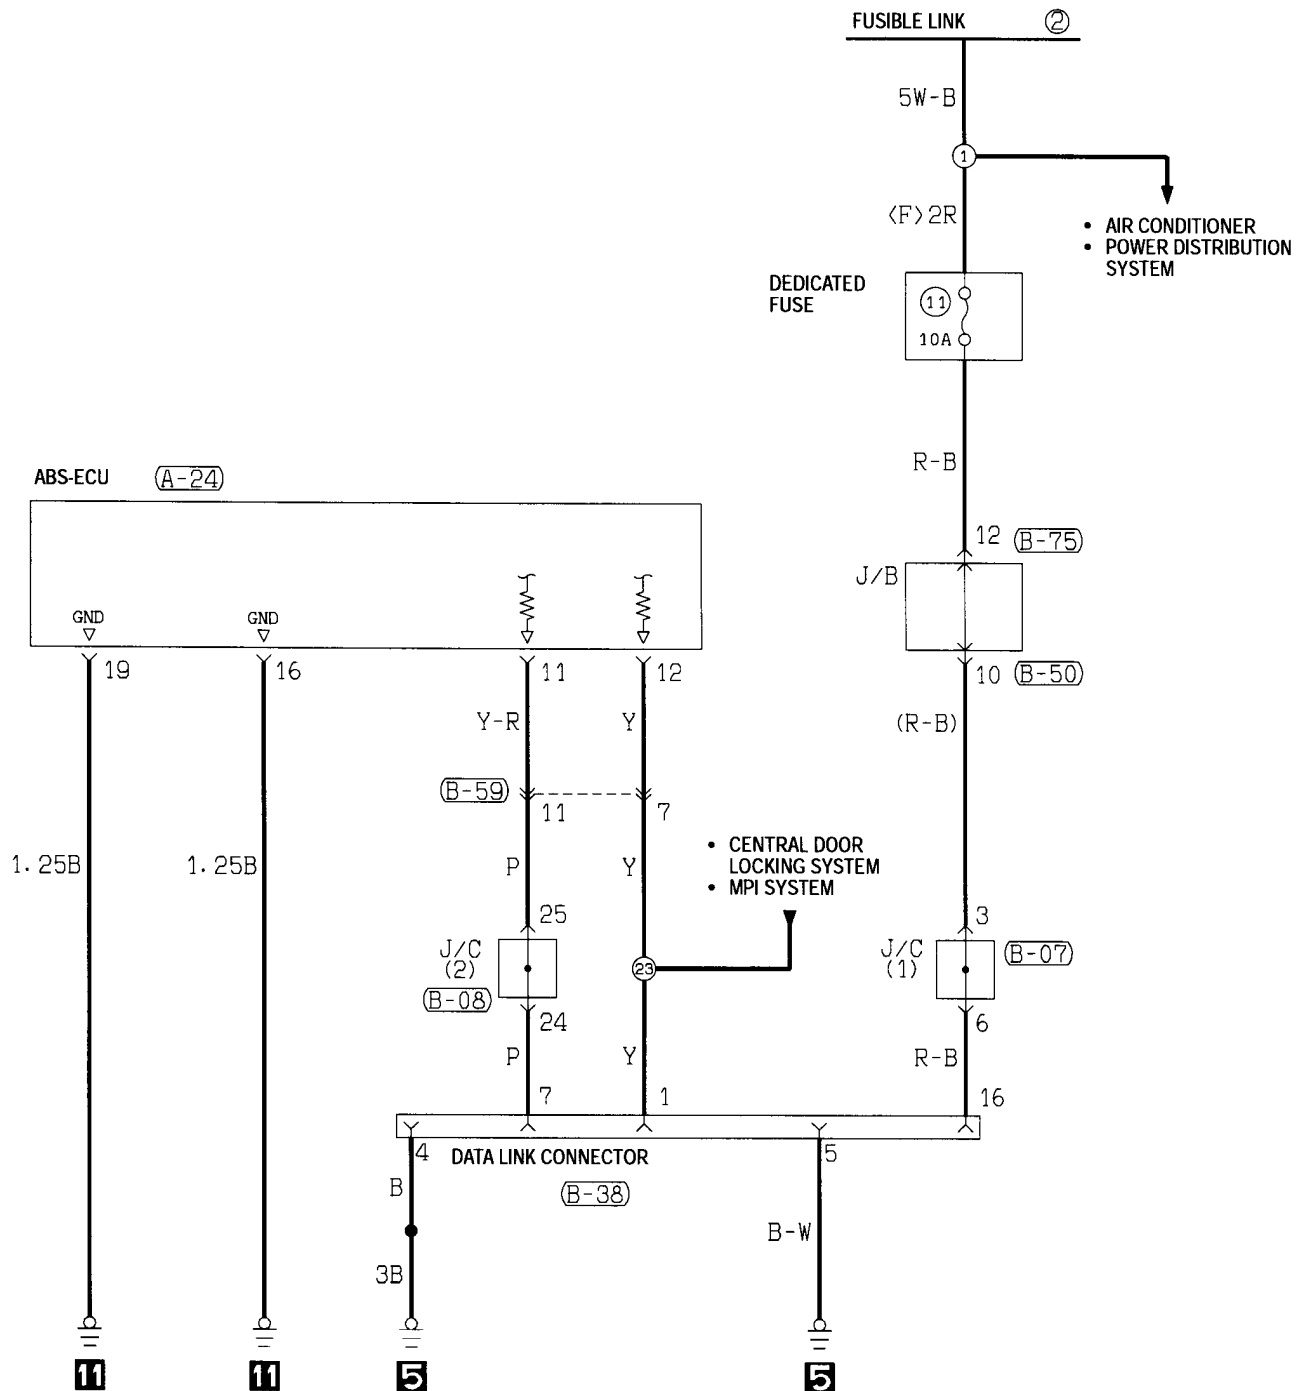


Wire color code
 B : Black
 BR : Brown
 W : White
 V : Violet

LG : Light Green
 O : Orange
 SB : Sky Blue

G : Green
 GR : Gray
 P : Pink

L : Blue
 R : Red
 Y : Yellow

NOTES

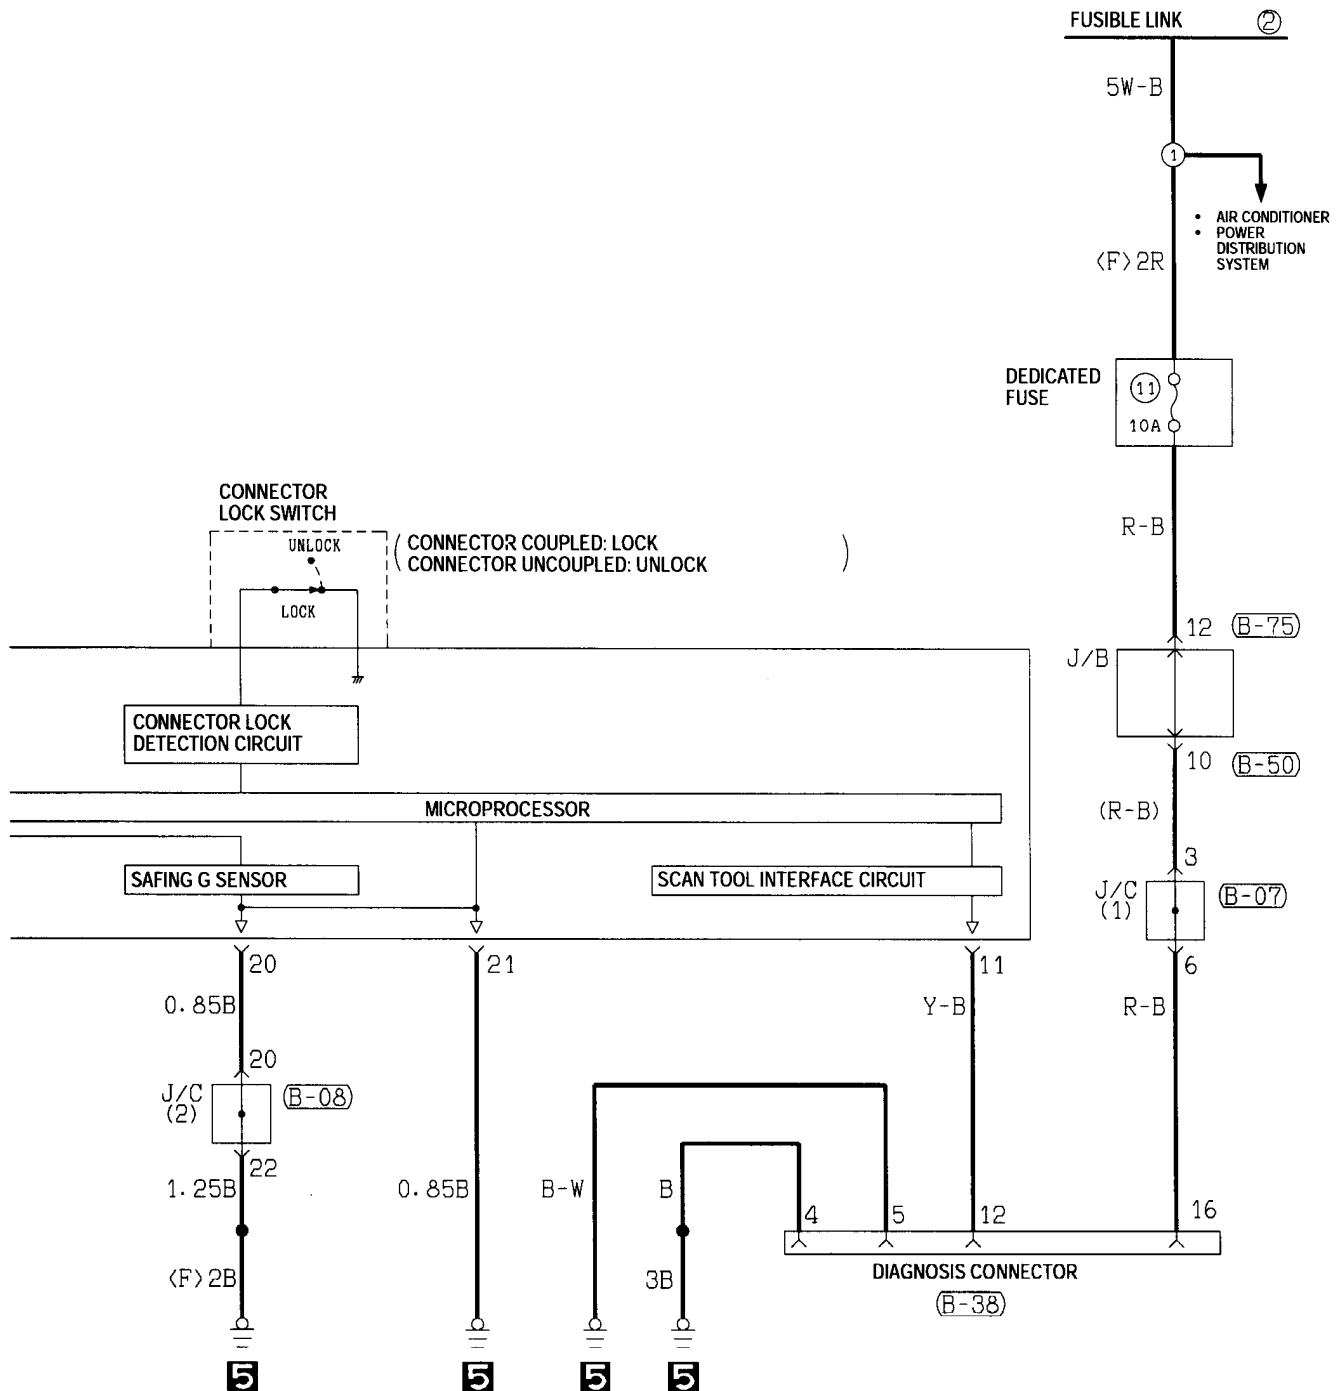

(B-51)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

(B-66)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(B-75)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18						

(C-04)

41	42	43	44	45	46	47	48
49							
50	51	52	53	54	55	56	57

(C-06)

1	2	3	4	5	6	7	8
9							
10	11	12	13	14	15	16	17

Wire color code

B : Black	LG : Light Green	G : Green	L : Blue
BR : Brown	O : Orange	GR : Gray	R : Red
W : White	SB : Sky Blue	P : Pink	Y : Yellow
V : Violet			

NOTES